

BODY AND TRIM

SECTION **BT**

CONTENTS

GENERAL SERVICING	2	SEAT	27
Precautions.....	2	Front Seat.....	27
Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER".....	2	Rear Seat.....	30
Clip and Fastener.....	3	SUN ROOF	31
BODY END	6	WINDSHIELD AND WINDOWS	35
Body Front End	6	Windshield and Rear Window.....	35
Body Rear End and Opener.....	8	Side Window.....	36
DOOR	10	DOOR MIRROR	37
Door Glass Fitting Adjustment.....	11	FRONT AND REAR AIR SPOILER	38
INSTRUMENT PANEL	14	Front Air Spoiler.....	38
INTERIOR TRIM	17	Rear Air Spoiler	38
EXTERIOR TRIM	22	BODY ALIGNMENT	39
		Engine Compartment.....	39
		Underbody	41

★ For seat belt, refer to MA and RS sections.

★ For body electrical systems, refer to EL section.

Precautions

- When removing or installing various parts, place a cloth or padding onto the vehicle body to prevent scratches.
- Handle trim, molding, instruments, grille, etc. carefully during removing or installation. Be careful not to soil or damage them.
- Apply sealing compound where necessary when installing parts.
- When applying sealing compound, be careful that the sealing compound does not protrude from parts.
- When replacing any metal parts (for example body outer panel, members, etc.), be sure to take rust prevention measures.

Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER"

The Supplemental Restraint System "Air Bag" and "Seat Belt Pre-tensioner", used along with a seat belt, help to reduce the risk or severity of injury to the driver and front passenger in a frontal collision. The Supplemental Restraint System consists of air bag modules (located in the center of the steering wheel and on the instrument panel on the passenger side), seat belt pre-tensioners, a diagnosis sensor unit, warning lamp, wiring harness and spiral cable. Information necessary to service the system safely is included in the **RS** section of this Service Manual.


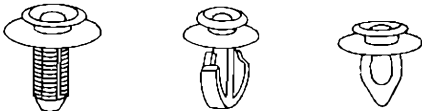





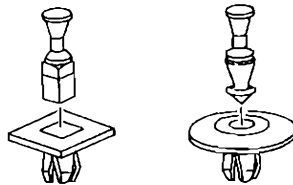
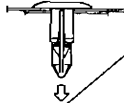
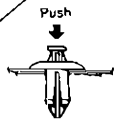

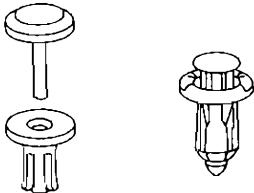
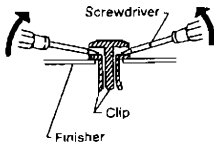
WARNING:

- To avoid rendering the SRS inoperative, which could increase the risk of personal injury or death in the event of a collision which would result in air bag inflation, all maintenance must be performed by an authorized NISSAN dealer.
- Improper maintenance, including incorrect removal and installation of the SRS, can lead to personal injury caused by unintentional activation of the system.
- All SRS air bag electrical wiring harnesses and connectors are covered with yellow outer insulation. Do not use electrical test equipment on any circuit related to the SRS.

GENERAL SERVICING

Clip and Fastener

- Clips and fasteners in BT section correspond to the following numbers and symbols
- Replace any clips and/or fasteners which are damaged during removal or installation

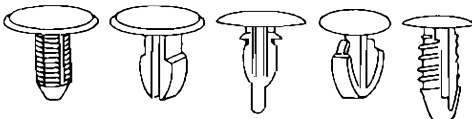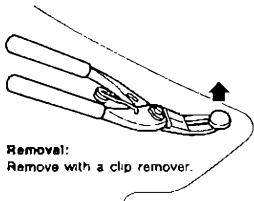



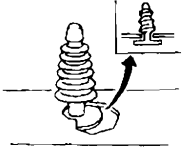
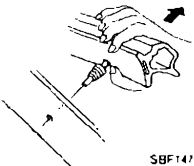

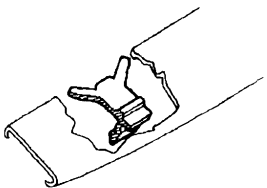
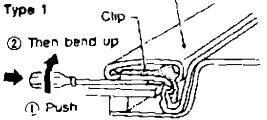
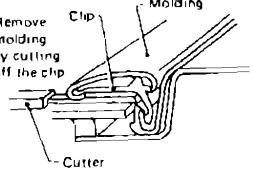

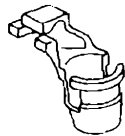
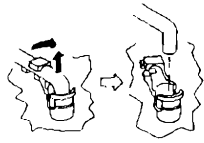
Symbol No	Shapes	Removal & Installation
		<p>Removal: Remove by bending up with flat-bladed screwdrivers or clip remover</p>  <p>SBF302H SBF367BA</p>
		 <p>Removal: Remove with a clip remover.</p> <p>SBF303H SBF423H</p>
		<p>Push center pin to catching position. (Do not remove center pin by hitting it.)</p> <p>Push</p>  <p>Push</p>  <p>Installation:</p> <p>SBF256G SBF708E</p>
		<p>Removal:</p>  <p>Screwdriver Clip Finisher</p> <p>MBF518B SBF638C</p>

GI
WA
EM
LC
EC
FE
CL
MT
AT
PC
FA
RA
BA
BT
BS
MA
E
E

BT


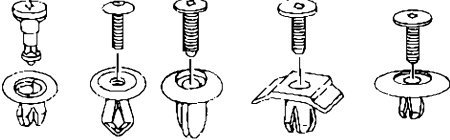

GENERAL SERVICING

Clip and Fastener (Cont'd)

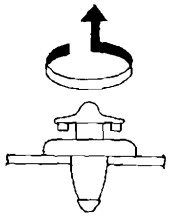Symbol No.	Shapes	Removal & Installation
 <p>C205</p>		 <p style="text-align: center;">MBF519B</p> <p style="text-align: right;">MBF520B</p>
 <p>CE103</p>		<p>Removal:</p>  <p style="text-align: center;">SBF104B</p> <p style="text-align: right;">SBF147B</p>
 <p>CE106</p>		<p>Removal:</p> <p>Type 1</p>  <p>① Push</p> <p>② Then bend up</p> <p style="text-align: right;">SBF654B</p> <hr/> <p>Type 2</p> <p>Remove molding by cutting off the clip</p>  <p style="text-align: right;">SBF653B</p> <p style="text-align: right;">SBF914B</p>
 <p>CR103</p>		<p>Removal:</p> <p>Holder portion of clip must be spread out to remove rod</p>  <p style="text-align: center;">SBF766B</p> <p style="text-align: right;">SBF770B</p>

GENERAL SERVICING

Clip and Fastener (Cont'd)

Symbol No	Shapes	Removal & Installation
	 <p style="text-align: right;">SBF078B</p>	<p>Removal:</p> <ol style="list-style-type: none"> 1. Screw out with a Phillips screwdriver. 2. Remove female portion with flat-bladed screwdriver  <p style="text-align: right;">SBF992G</p>

31
 32
 33
 34
 35
 36
 37
 38
 39
 40
 41
 42
 43
 44
 45
 46
 47
 48
 49
 50
 51
 52
 53
 54
 55
 56
 57
 58
 59
 60
 61
 62
 63
 64
 65
 66
 67
 68
 69
 70
 71
 72
 73
 74
 75
 76
 77
 78
 79
 80
 81
 82
 83
 84
 85
 86
 87
 88
 89
 90
 91
 92
 93
 94
 95
 96
 97
 98
 99
 100

BT

BODY END

Body Front End

- When removing or installing hood, place a cloth or other padding on hood. This prevents vehicle body from being scratched.
- Bumper fascia is made of plastic. Do not use excessive force and be sure to keep oil away from it.
- Hood adjustment: Adjust at hinge portion.
- Hood lock adjustment: After adjusting, check hood lock control operation. Apply a coat of grease to hood locks engaging mechanism.
- Hood opener: Do not attempt to bend cable forcibly. Doing so increases effort required to unlock hood.

REMOVAL — Front bumper assembly

- ① Remove bolts securing bumper fascia to engine undercover.
- ② Remove screws and clips (C203) securing left and right sides of front fender protector. Then remove the front fender protector.
- ③ Remove clips (C3101) securing front grille, then remove the front grille.
- ④ Remove clip (C205) securing bumper fascia bracket to hood lock stay **A**.
- ⑤ Remove screws located at wheel opening.
- ⑥ Remove the screw securing each side of front clearance lamp assembly, then remove the front clearance lamp assembly.
- ⑦ Remove the screw securing each side of front turn signal lamp assembly. Then remove the front turn signal lamp assembly.
- ⑧ Remove bolts securing each side of front fender bracket.
- ⑨ Remove nuts securing left and right front fenders to bumper fascia bracket **B**.
- ⑩ Remove nuts and bolts securing bumper assembly to front side member.
- ⑪ Extract bumper assembly.
- ⑫ Remove bolts securing bumper fascia bracket to bumper fascia.
- ⑬ Disassemble bumper fascia and bumper fascia bracket.

BODY END

Body Front End (Cont'd)


SEC. 260-261-262-263- 620-623-630-650-747

Hood lock adjustment

- Adjust hood so that hood primary lock meshes at a position 1 to 15 mm (0.039 to 0.059 in) lower than fender.
- After hood lock adjustment, adjust bumper rubber.
- When securing hood lock, ensure it does not fit. Striker must be positioned at the center of hood primary lock.
- After adjustment, ensure that hood primary and secondary lock operate properly.


Hood lock secondary latch hooking length

 More than 5.0 mm (0.197 in)






Bumper rubber adjustment

- Adjust so that hood is aligned with fender. At that time deflection is approx 2 mm (0.08 in).
- (Bumper rubber free height is approx. 13 mm (0.51 in).)

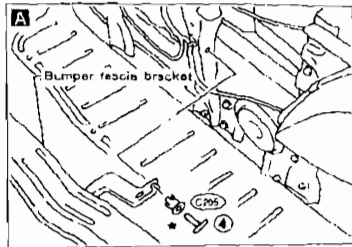

Hood adjustment

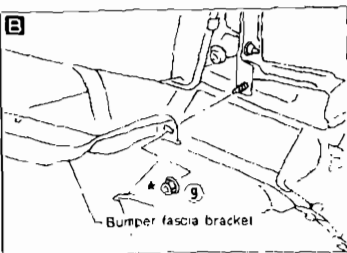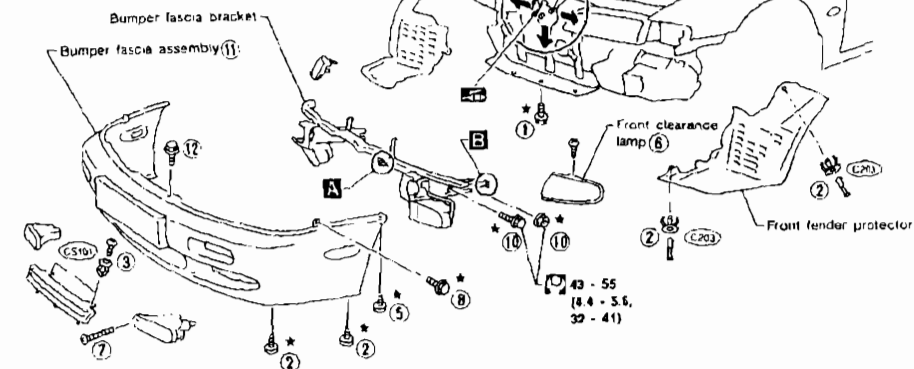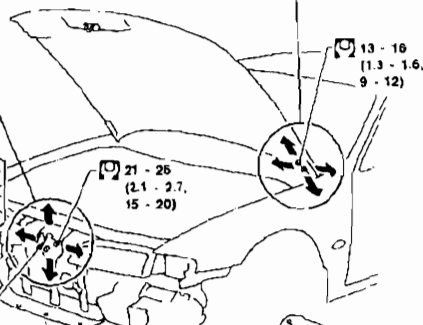

- * Bumper assembly mounting bolts, nuts and clips
- Ⓜ N.m (kg-m (ft-lb))









MBF527B

Body Rear End and Opener

- When removing or installing trunk lid, place a cloth or other padding on trunk lid. This prevents vehicle body from being scratched
- Trunk lid adjustment: Adjust at hinge-lid portion for proper trunk lid fit.
- Trunk lid lock system adjustment: Adjust striker so that it is in the center of the lock. After adjustment, check trunk lid lock operation.
- Opener cable: do not attempt to bend cable using excessive force
- After installation, make sure that trunk lid and fuel filler lid opener smoothly.

REMOVAL — Rear bumper assembly


- ① Remove trunk trim. Refer to "TRUNK ROOM TRIM" in "INTERIOR TRIM" for details. (BT-21)
- ② Remove clips (CS10) securing rear panel upper to bumper fascia.
- ③ Remove clips (CS10) securing rear panel lower to bumper fascia.
- ④ Remove bolts from lower side of each side bumper
- ⑤ Working inside trunk, remove nuts securing left and right rear fenders to bumper fascia (C)
- ⑥ Extract bumper assembly (F).

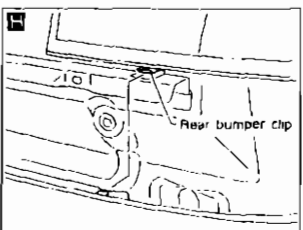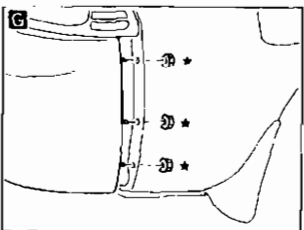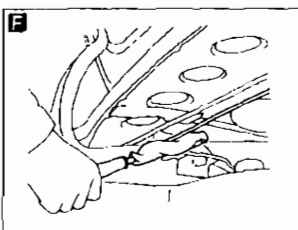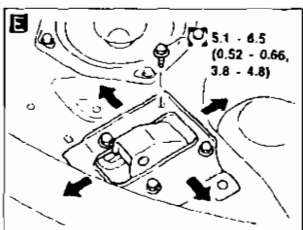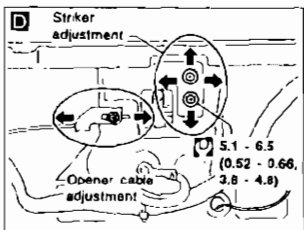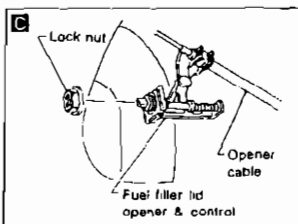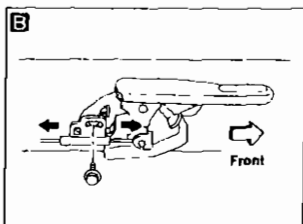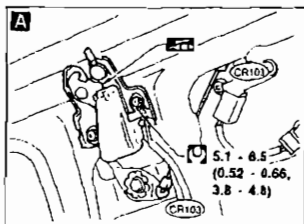

BODY END

Body Rear End and Opener (Cont'd)

SEC. 843-850

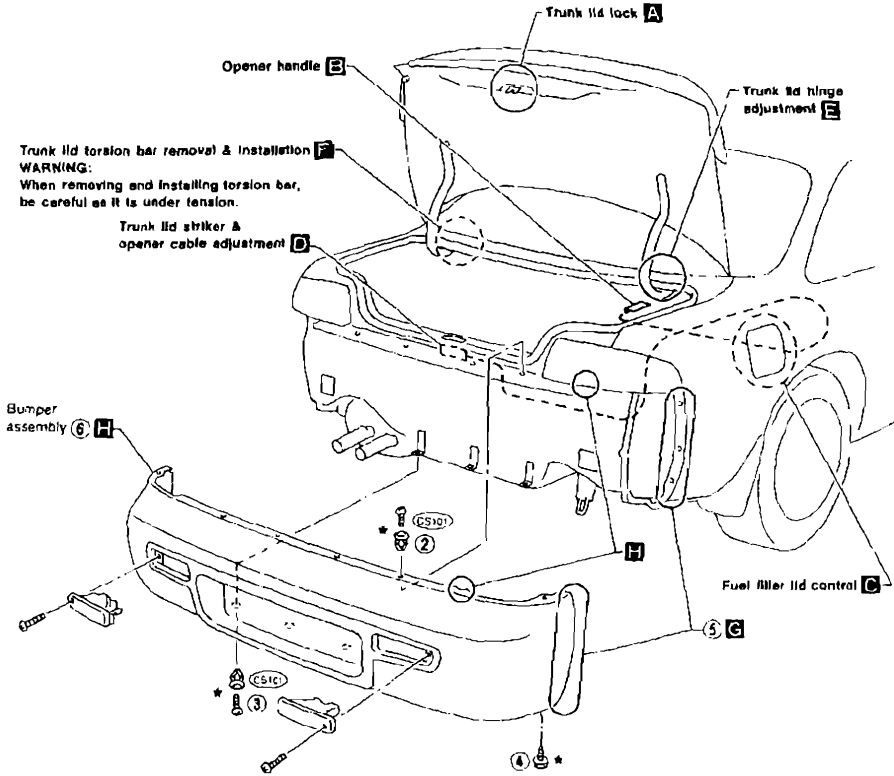

* Bumper assembly mounting bolts, nuts and clips




BT

MRF538A



DOOR

- For removal of door trim, refer to "DOOR TRIM" in "INTERIOR TRIM" for details (BT-19)
- After adjusting door or door lock, check door lock operation.

SEC. 800-803-805

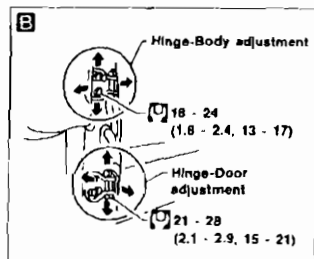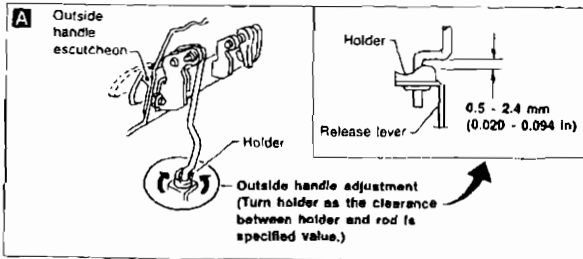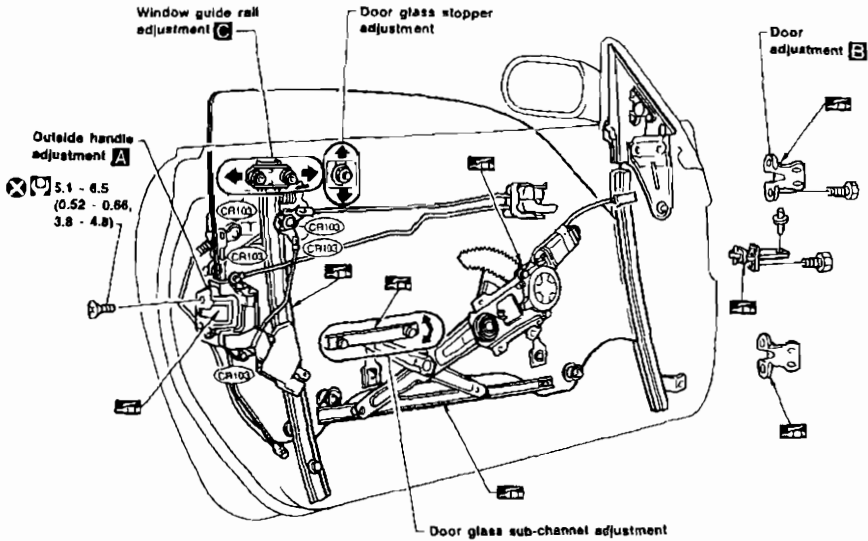

Striker adjustment

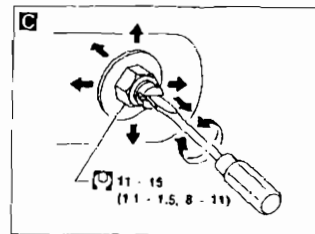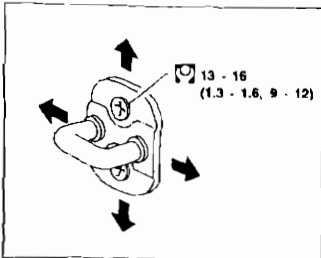

N·m (kg·m / ft·lb)

K/ST047A

DOOR


Door Glass Fitting Adjustment

The door glass is properly adjusted using the following five methods:

- A** In-out adjustment (at the glass waist)
- B** Fore-aft tilt adjustment
- C** In-out tilt adjustment (at the glass upper stop)
- D** Up-stop adjustment
- E** Fore-aft adjustment


NOTICE:

When adjusting the door glass, it is not necessary to remove the outside door molding.

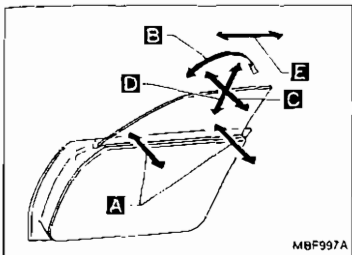

MBF997A




Adjustment locations

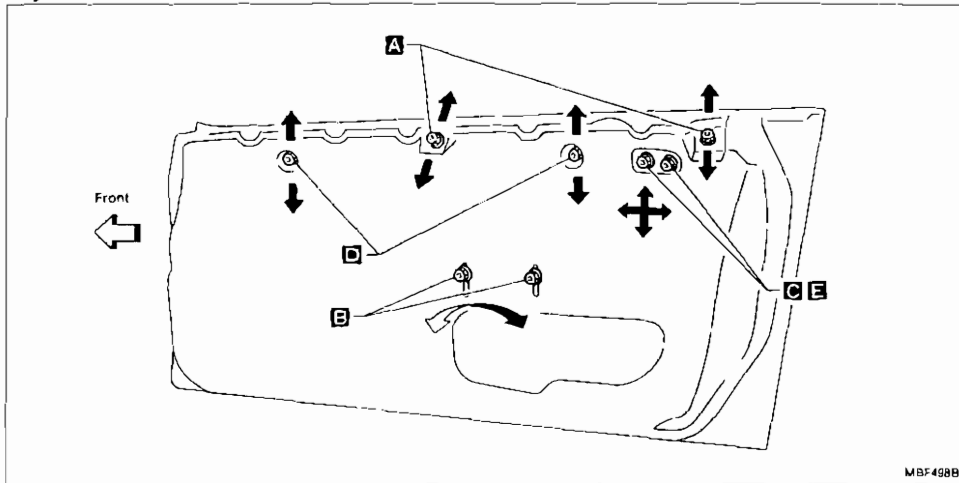

MBF498B

Adjustment standard clearance

SEC. 803

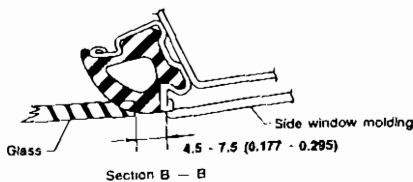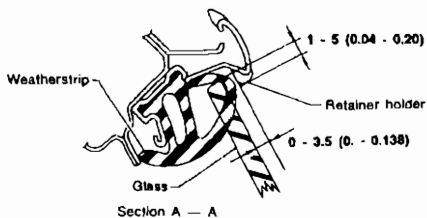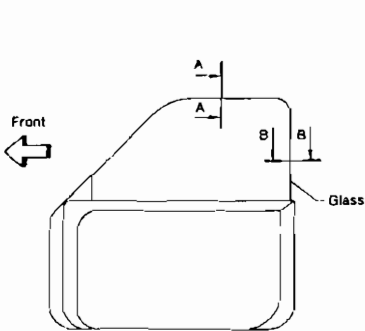


Unit: mm (in)

S6F394HA

BT

DOOR

Door Glass Fitting Adjustment (Cont'd)

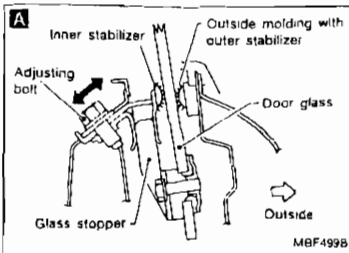


A IN-OUT ADJUSTMENT (at the glass waist)

1. Raise door glass until glass stopper is in contact with inner stabilizer, just before the window stops.
2. Loosen adjusting bolts
3. Lightly press door glass upper end outward so that glass outer surface contacts outer stabilizer. With glass held in that position, press inner stabilizer to glass inner surface and tighten adjusting bolt.


CAUTION:

Make sure nap portions of stabilizers are clean and free from oil, grease, etc.

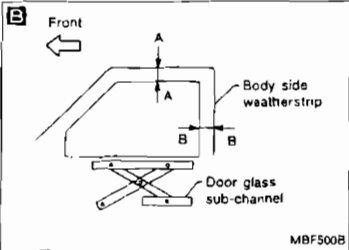

B FORE-AFT TILT ADJUSTMENT


- Adjust door glass sub-channel so that the adjustment standard clearances A - A and B - B (Refer to BT-11) are obtained at the glass and retainer holder/body side weatherstrip locations.

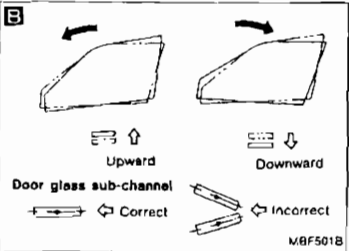

- For sub-channel adjustment procedures, refer to figure at left as a guide

CAUTION:

- Make sure door glass sub-channel is horizontal.
- The fore-aft tilt adjustment must be made at the same time the fore-aft adjustment B is made.

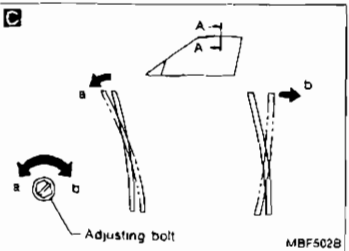


C IN-OUT TILT ADJUSTMENT (at glass upper stop)

1. Adjust door glass-to-holder clearance to 0 to 3.5 mm (0 to 0.138 in) (A) with the adjusting bolts.

CAUTION:

- Turn adjusting bolt clockwise to move door glass upper end outward.
- Turn adjusting bolt counterclockwise to move door glass upper end inward.

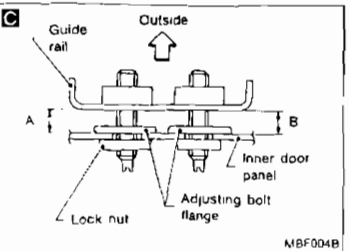

- For sub-channel adjustment procedures, refer to figure at left as a guide

CAUTION:





- Make sure door glass sub-channel is horizontal.
- The fore-aft tilt adjustment must be made at the same time the fore-aft adjustment B is made.

DOOR

Door Glass Fitting Adjustment (Cont'd)

D UP-STOP ADJUSTMENT

1. Adjust panel stopper height so that clearance at upper edge of door meets the adjustment standard clearance A - A (Refer to BT-11). Make sure front and rear glass stoppers lightly contact front and rear panel stoppers, then tighten adjusting nuts.
2. If stoppers do not contact each other, adjust sub-channel nut. Refer to "E Fore-aft tilt adjustment".
3. Open and close doors to make sure upper end of door glass does not contact holder.

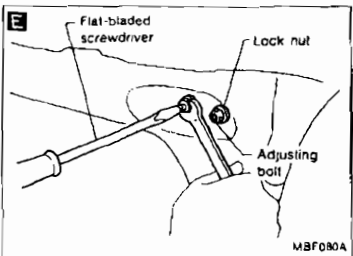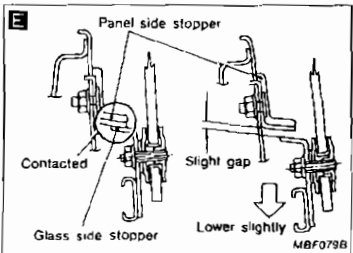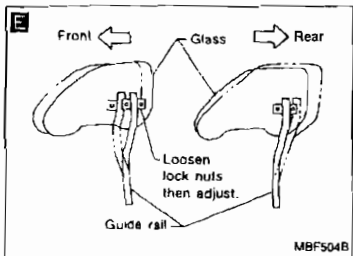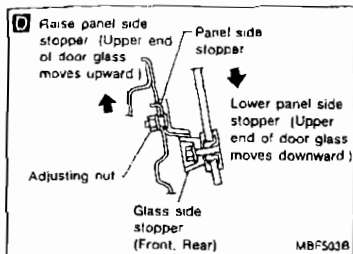

E FORE-AFT ADJUSTMENT

1. Adjust guide rail in the fore-aft direction so that when door is closed or opened the clearance between upper edge of door glass and holder conforms to the adjustment standard clearance A - A (Refer to BT-11).
2. If outer perimeter of door glass interferes with holder when door is opened or closed, refer to "E Fore-aft tilt adjustment" for procedures.

CAUTION:

When loosening guide rail lock nut, prevent adjusting bolt from turning by holding it with a standard screwdriver.

3. Lower the glass slightly until the glass side stopper comes off the panel side stopper.

CAUTION:

Do not lower the glass excessively.

- After completing door glass adjustment, retighten all lock nuts.

CAUTION:

While tightening lock nuts, hold adjusting bolts using a standard screwdriver to prevent them from turning.

GI

MA

EM

LC

EG

FE

CL

MT

AT

PD

FA

RA

BR

ST

RS

BT

MA

EL


DX

INSTRUMENT PANEL

CAUTION:


- Disconnect ground terminal from battery in advance.
- Disconnect air bag system line in advance.
- Never tamper with or force air bag lid open, as this may adversely affect air bag performance.
- Be careful not to scratch pad and other parts.

REMOVAL — Instrument panel assembly



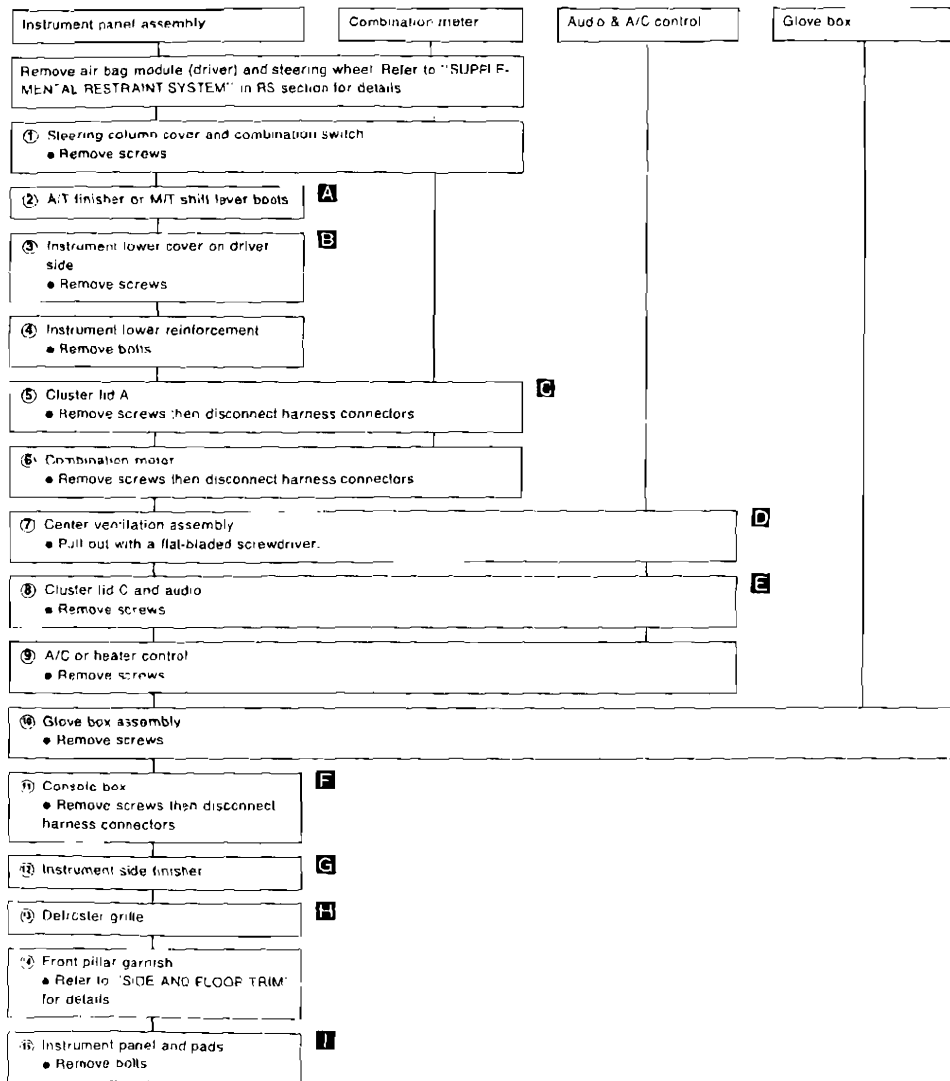


INSTRUMENT PANEL

SEC. 248-487-680-685-969

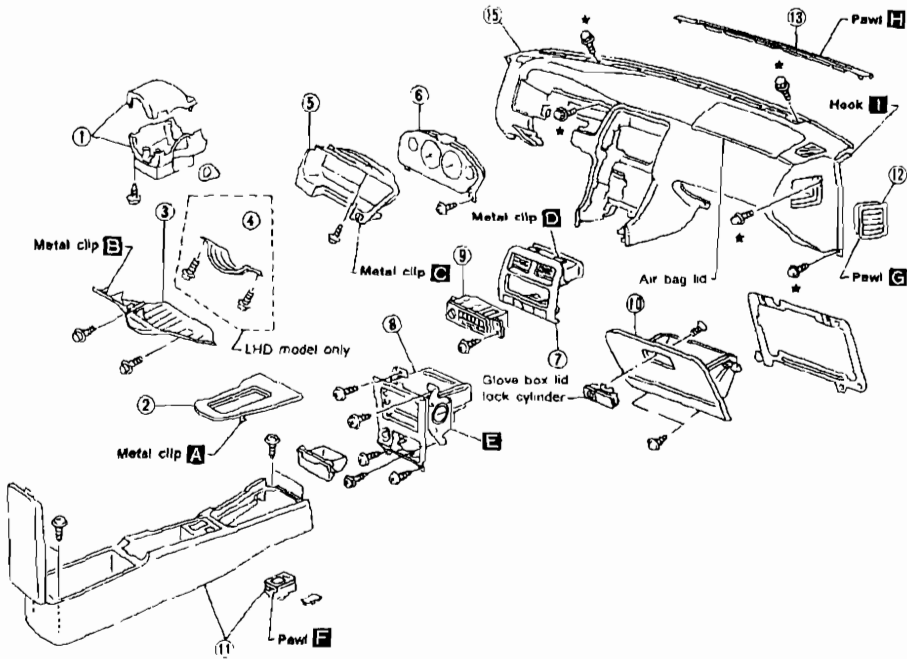


* Instrument panel assembly mounting bolts and nuts

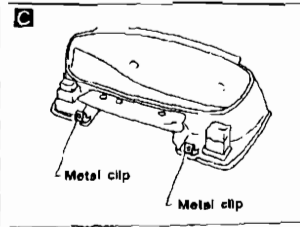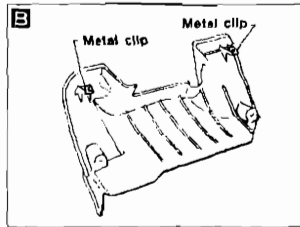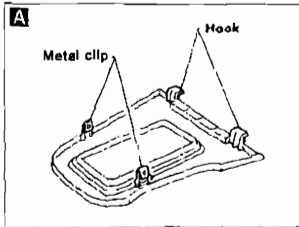

GE
WA
EM
LC
EC
FE
GL
MT
AY
BP
FA
FA
SE
ST
PS
BT
RA
EL
OX

INSTRUMENT PANEL

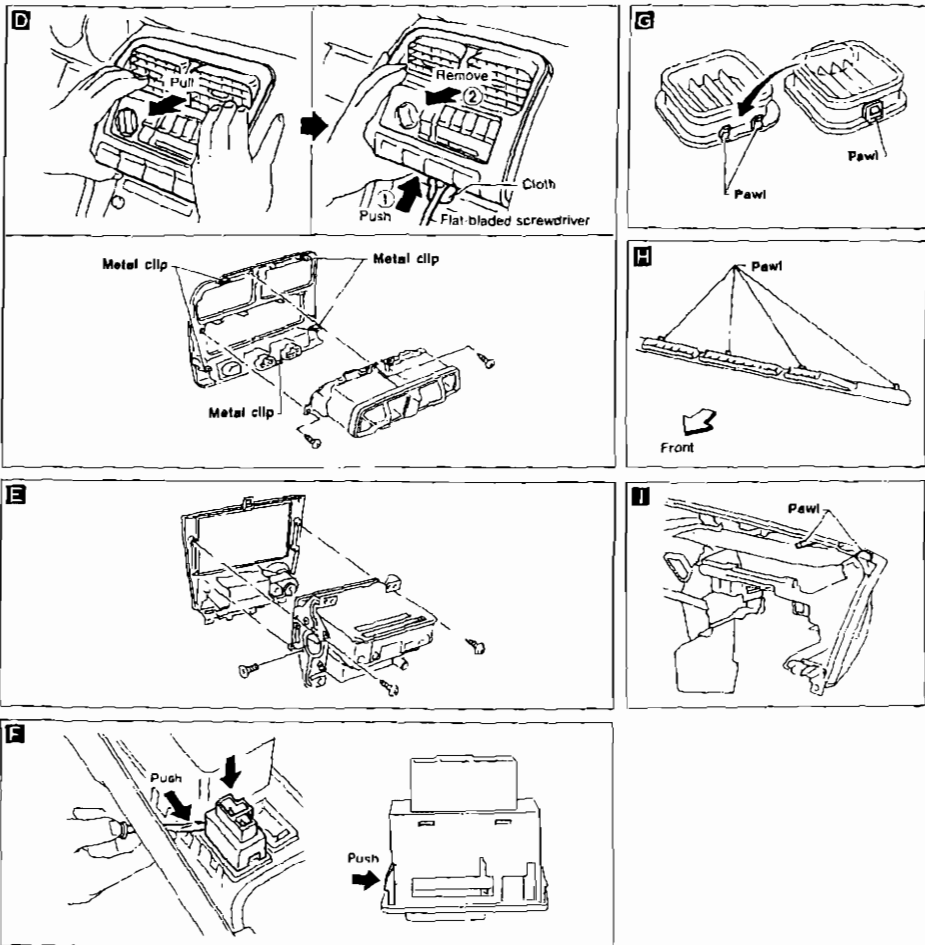

MBF529B

INTERIOR TRIM

SIDE AND FLOOR TRIM

CAUTION:

Wrap the tip of flat-bladed screwdriver with a cloth when removing metal clips from garnishes.

REMOVAL — Body side trim

- ① Remove front and rear seat. Refer to "SEAT" for details (BT-27).
- ② Remove dash side finisher.
- ③ Remove kicking plate.
- ④ Remove front pillar garnish.
- ⑤ Remove rear side finisher.
- ⑥ Remove rear pillar finisher.
- ⑦ Remove rear parcel shelf.
- ⑧ Remove seat back finisher welt. Refer to "TRUNK ROOM TRIM" for details (BT-21).
- ⑨ Remove seat back finishers (Right, Center, Left).

MA

MA

EM

LC

RC

RE

GL

MT

RT

FB

FA

RA

RR

ST

RS

BT





MA

EL

EX

INTERIOR TRIM

 SEC. 678-749-769-799-809

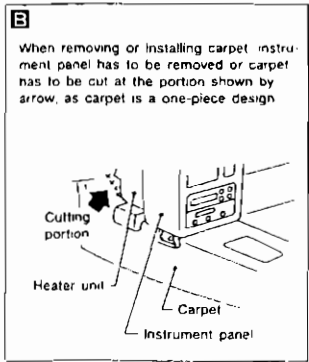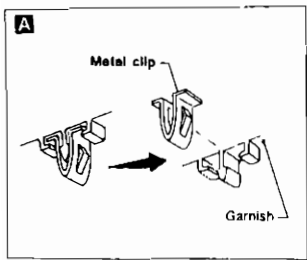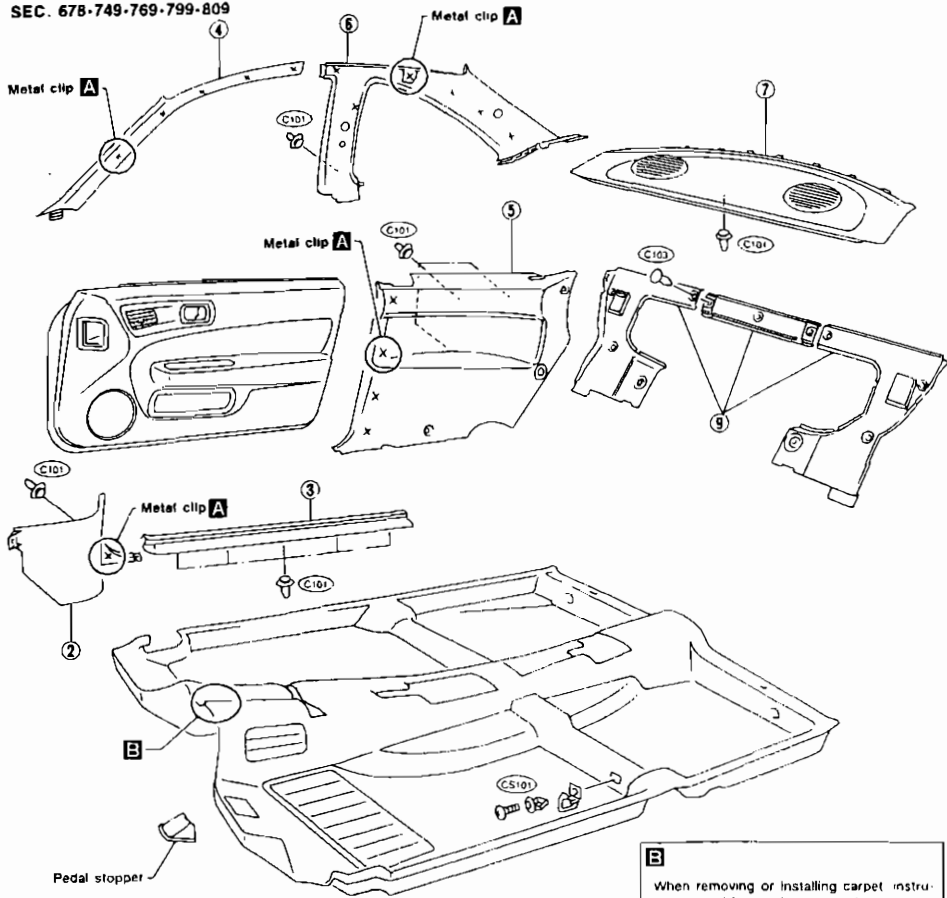






MBF445BA

DOOR TRIM

REMOVAL — Door trim

- ① Remove screws securing inside handle escutcheon, then remove the inside handle escutcheon **A**.
- ② Remove power window switch **B**.
- ③ Remove screws securing door finisher.
- ④ Remove clips **(C103)** securing door finisher.
- ⑤ Pull door finisher to remove clips **(C101)** and metal clips **C** from door panel and remove door finisher. Disconnect harness connectors.
- ⑥ Remove ventilator grille and ventilator duct assembly from door finisher **D**.

SEC. 809

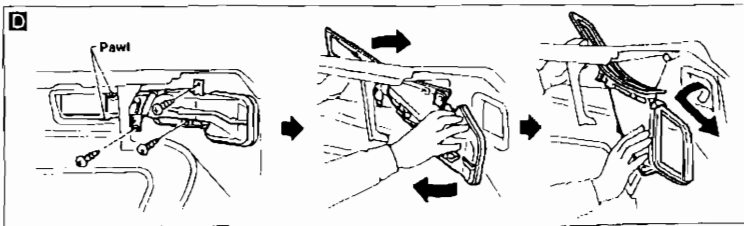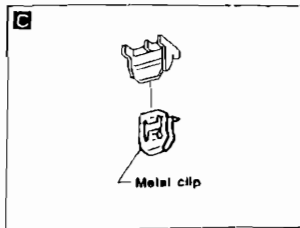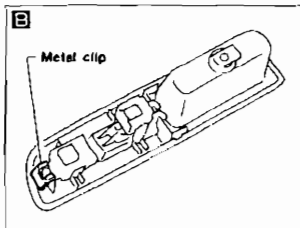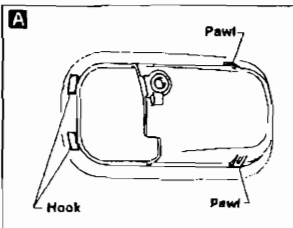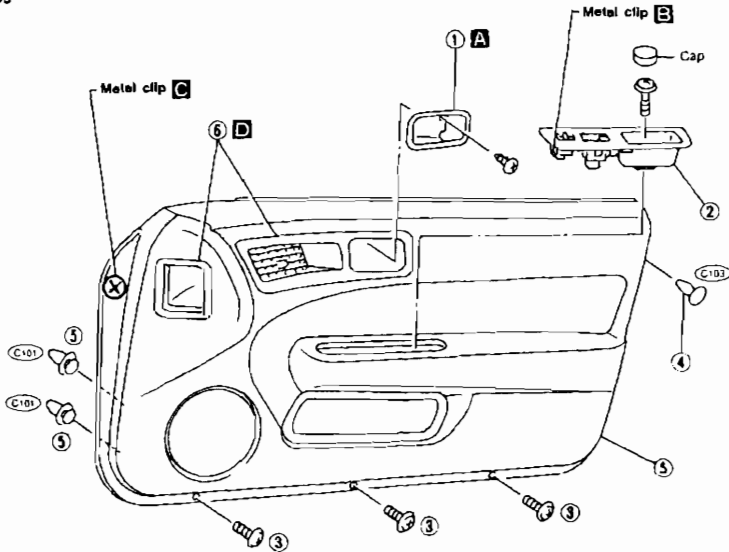


INTERIOR TRIM

ROOF TRIM

REMOVAL — Headlining

- ① Remove rear seat. Refer to "Rear Seat" for details (BT-30).
- ② Remove seat belt adjuster cover over anchor bolt
- ③ Remove front and rear seat belts. Refer to "Seat Belt" in RS section for details.
- ④ Remove body side trim. Refer to "SIDE AND FLOOR TRIM" for details (BT-17).
- ⑤ Remove sunroof switch **A**.
- ⑥ Remove inside mirror assembly.
- ⑦ Remove sun visors **B**.
- ⑧ Remove interior lamp assembly.
- ⑨ Remove sunroof welt **C**.
- ⑩ Remove clips **C103** securing each side of headlining.
- ⑪ Remove metal clips securing headlining **D**.
- ⑫ Remove headlining.


SEC. 738-963-964

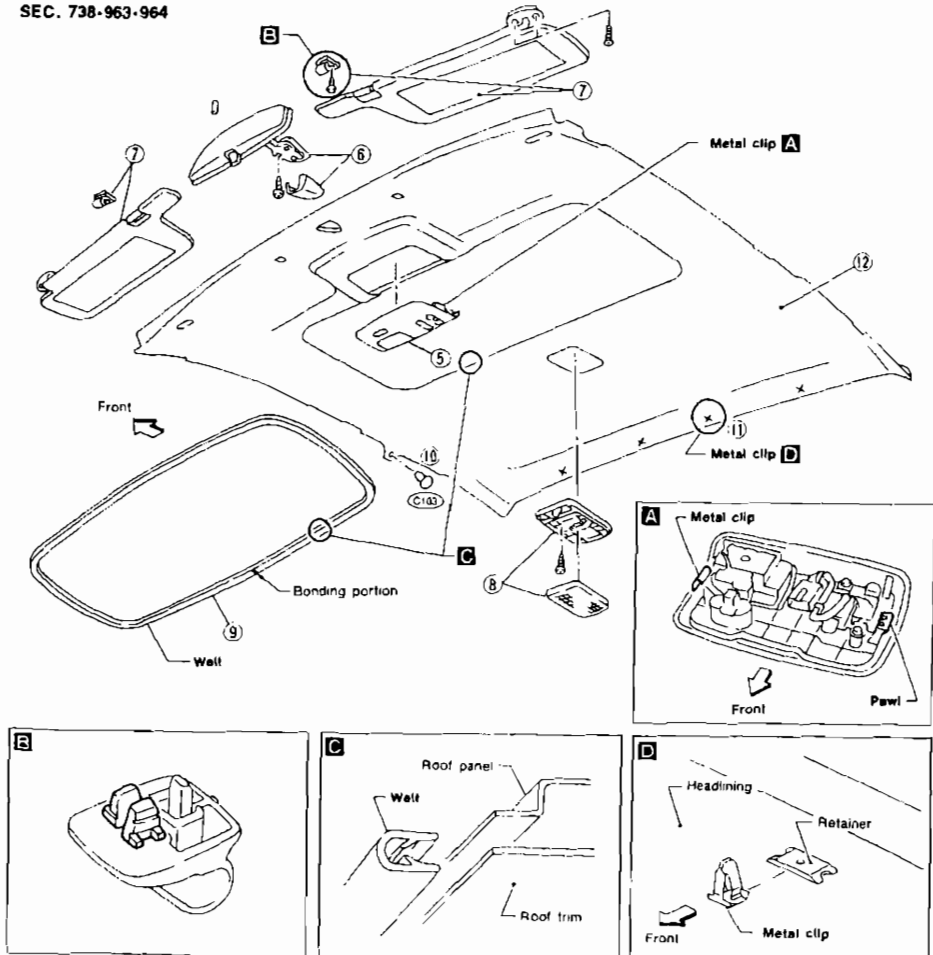

INTERIOR TRIM

TRUNK ROOM TRIM

SEC 799-849


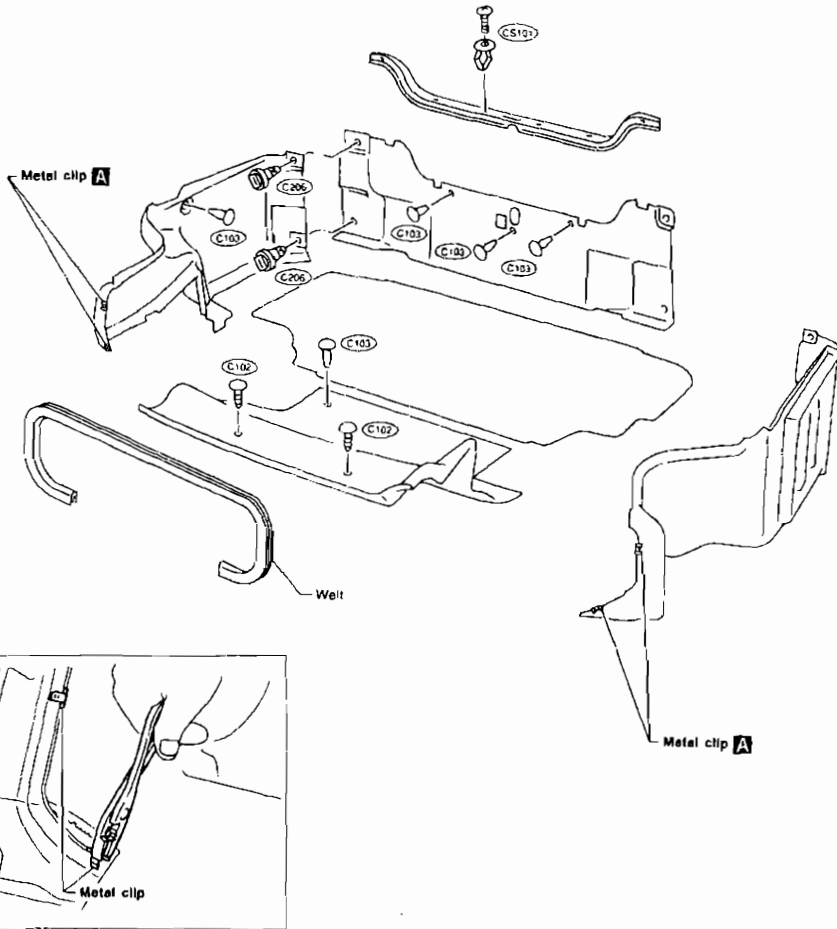


GE
MA
EM
LS
EG
EE
CL
WT
AT
PD
FD
PD
BT
BT
BT

MBF448BA

BT

EXTERIOR TRIM

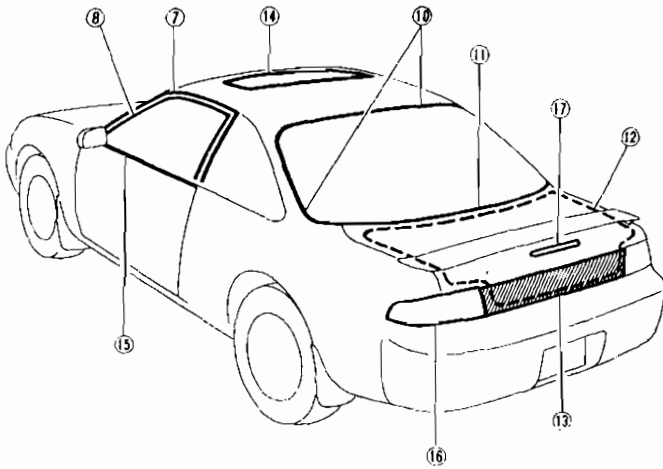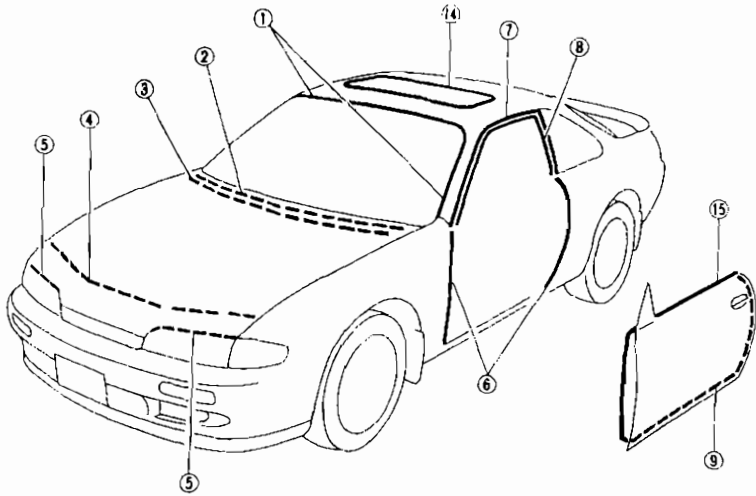

MBF449B

EXTERIOR TRIM

① Windshield upper and side molding

Method 1

Cut off top portion of molding and clean glass and panel surfaces



Apply sealant to top portion of molding




Cut off lower portion of new molding



Finish well to give it a good appearance

Method 2

1. Cut off sealant at glass end.
2. Clean the side on which panel was mounted.
3. Set molding fastener and apply sealant to body panel, and apply primer to molding and body.

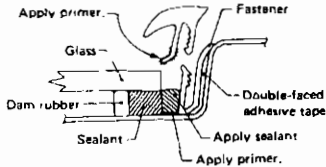


4. Install molding by aligning the molding mark located on center with vehicle center. Be sure to install tightly so that there is no gap around the corner.

SBF161F

②, ③ Cowl top grille and hood rear sealing rubber


SEC. 660

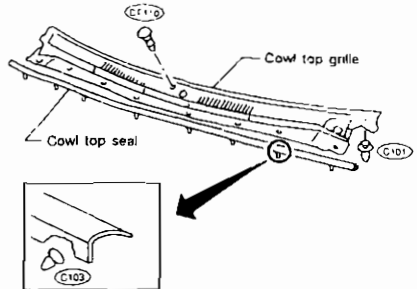

MBF450B


④, ⑤ Hood front sealing rubber

SEC. 650

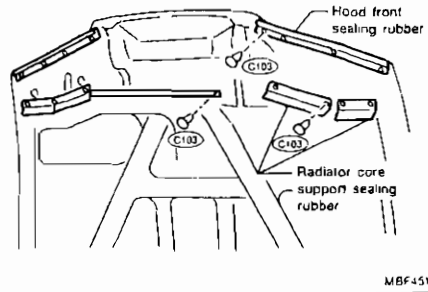

MBF451B

⑥ Body side welt





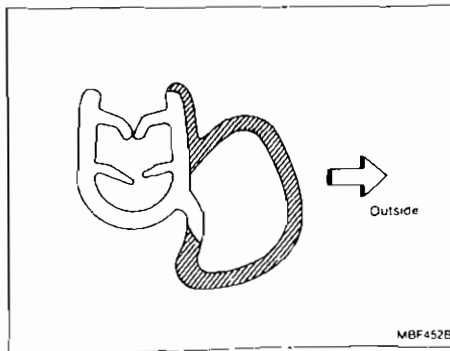


MBF452B

EXTERIOR TRIM

⑦, ⑧ Body side weatherstrip and weatherstrip retainer


SEC. 766

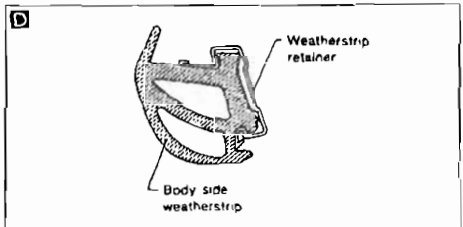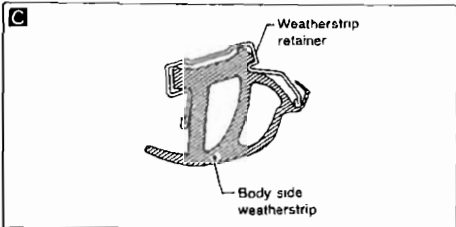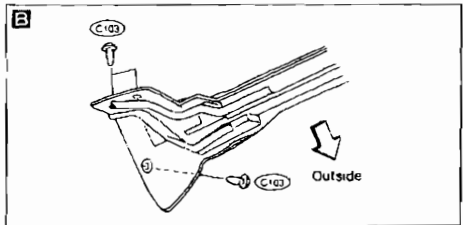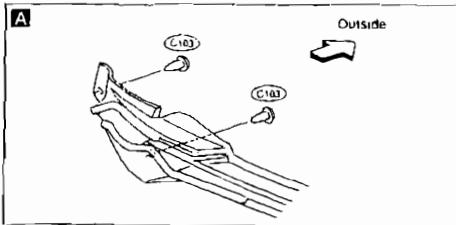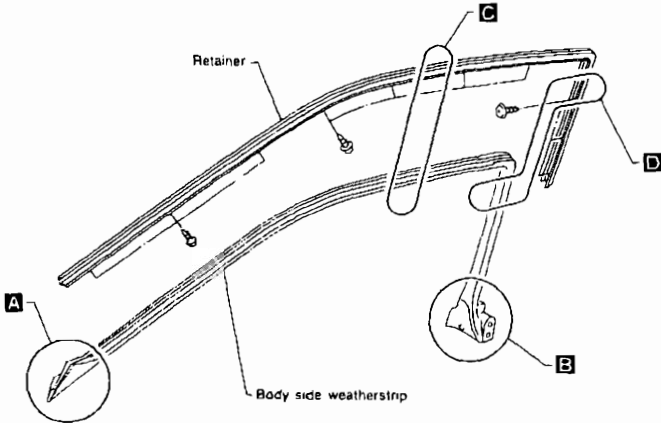

MBF 453BA

⑨ Door weatherstrip

Before removing door weatherstrip, remove door trim. Refer to "DOOR TRIM" for details (BT-19).

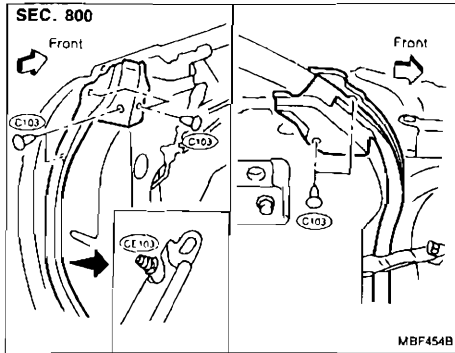


⑩ Back window upper and side molding (SEC. 797)

Basically the same as windshield upper and side molding

⑪ Back window lower molding (SEC. 797)


It is mounted with screws.

⑫ Trunk lid weatherstrip

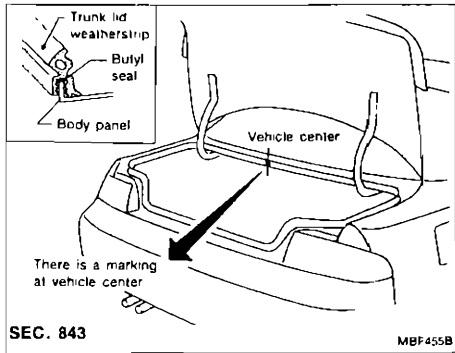


⑬ Rear panel finisher

SEC. 265

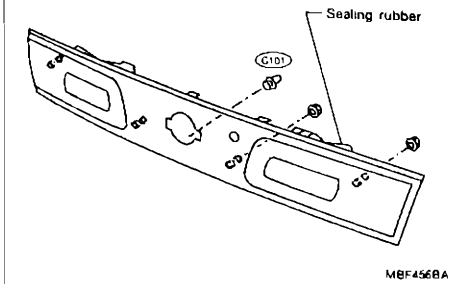


⑭ Sun roof lid weatherstrip

SEC. 736

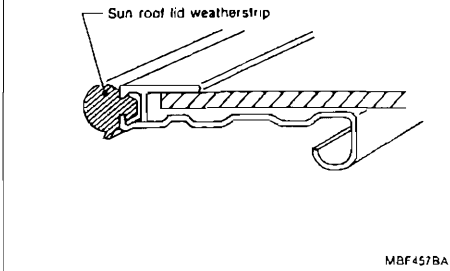

⑮ Door waist outside molding


SEC. 800

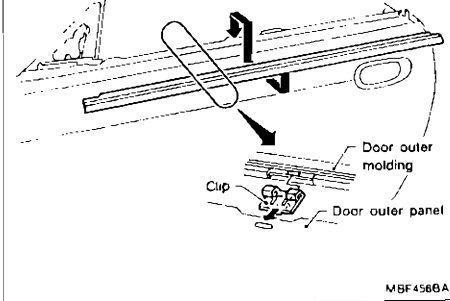


GT
MA
EM
LC
EC
FE
CL
WT
BT
PC
FA
RA
RP
ST
RS
BT
RE
EL
FR

16 Rear combination lamp

SEC. 265

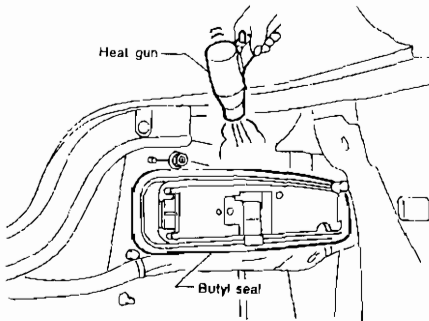

- Warm up lamp assembly area to a temperature a little below 60°C (140°F).

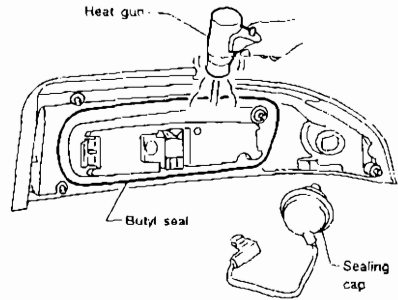


- Apply butyl seal evenly as it tends to become thin in the corners.
- Warm up lamp assembly area to a temperature a little below 60°C (140°F).

M6F459B

17 High-mounted stop lamp

SEC. 268



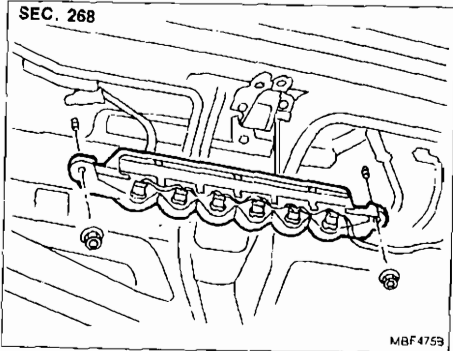


SEAT

- When removing or installing the seat trim, carefully handle it to keep dirt out and avoid damage.

Front Seat

SEC. 070

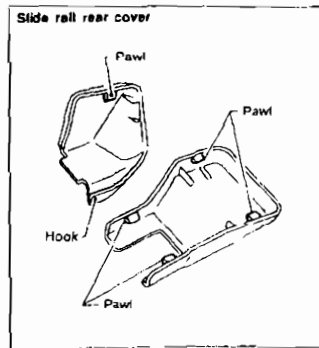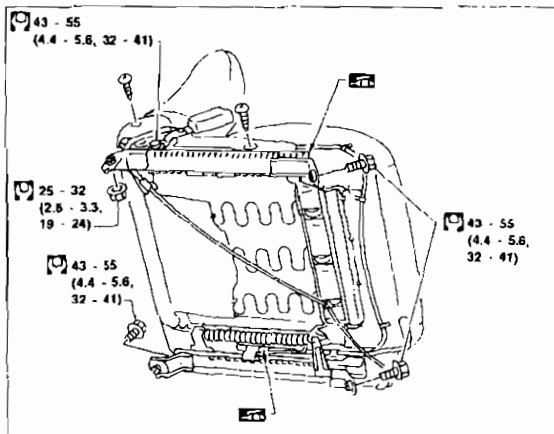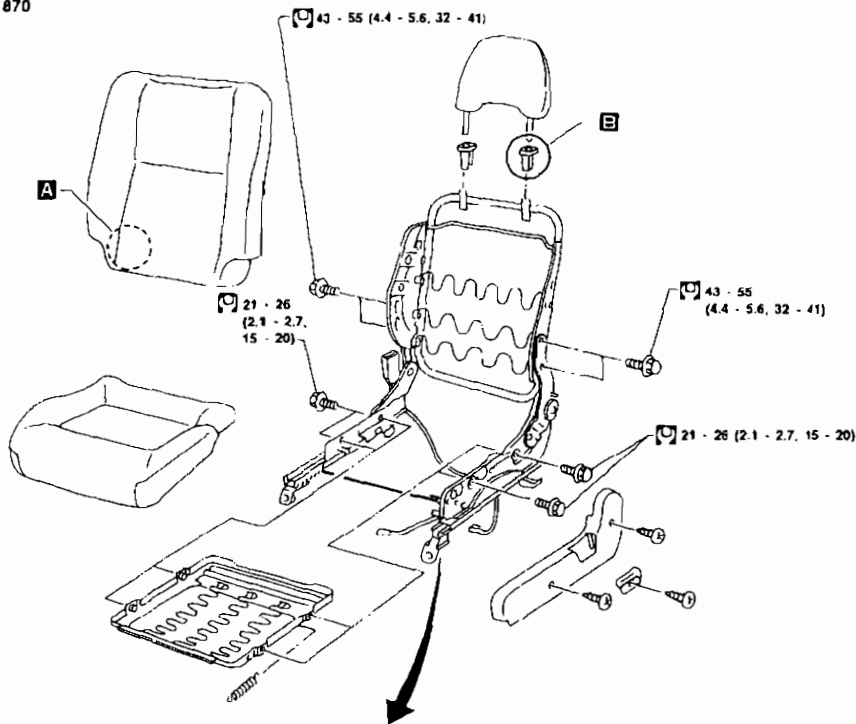


N·m (kg-m, ft-lb)

BT
MA
EM
LC
EC
EE
CL
MT
AT
PB
FA
BA
BR
BT
PS
BT
HA
EL
DY


SEAT

Front Seat (Cont'd)

Remove retainer from lower side of seatback with fingers

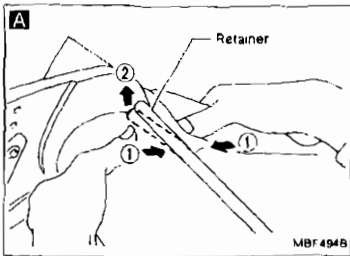

Roll up seatback trim all the way to gain access to headrest holder pawls. Disengage and push headrest holder pawls to unlock holder. Lift off headrest holder.

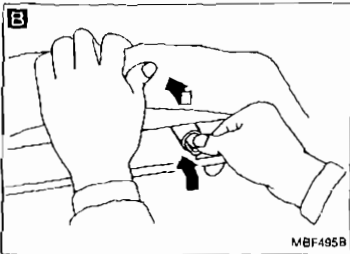


SEAT

Front Seat (Cont'd)

HEATED SEAT

- When handling seat, be extremely careful not to scratch heating unit
- To replace heating unit, seat trim and pad should be separated.
- Do not use any organic solvent, such as thinner, benzene, alcohol, gasoline, etc. to clean trims.

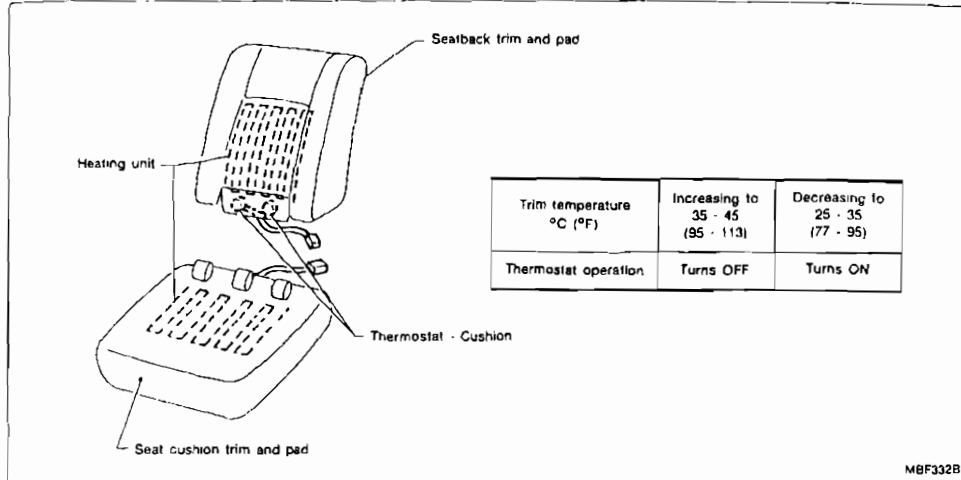





★ For Wiring Diagram, refer to "HEATED SEAT" in EL section.

GI
MA
EM
LC
EC
FE
GL
MT
AT
PD
FA
RA
BR
ST
RS
BT
NA
EA
COX

SEAT

Rear Seat

SEC. 880

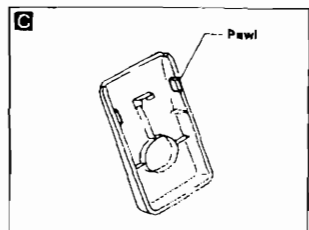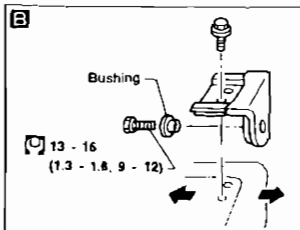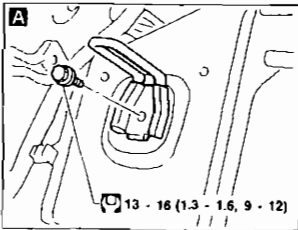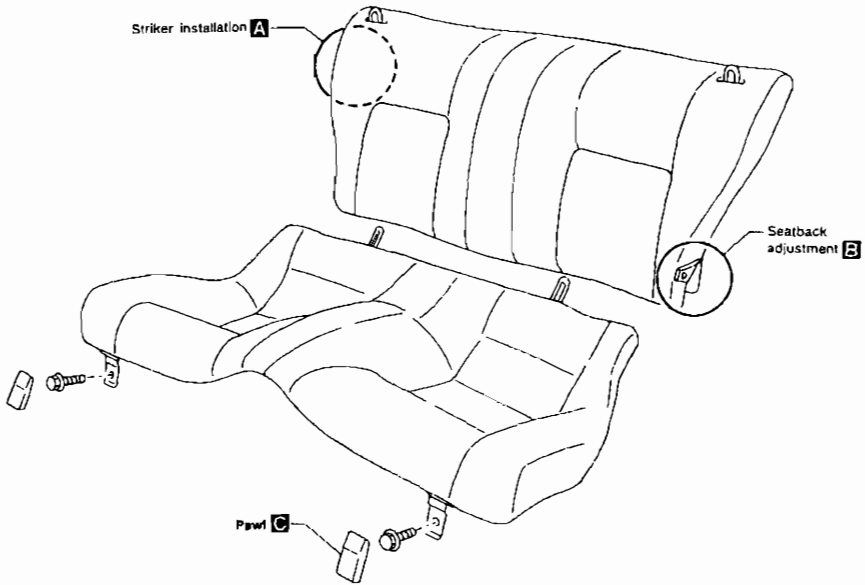

N·m (kg·m, ft·lb)

MBF461BA


SUN ROOF

★ For Wiring Diagram, refer to "ELECTRIC SUN ROOF" in EL section.

ADJUSTMENT

Install motor & limit SW assembly and sunroof rail assembly in the following sequence:

1. Arrange equal lengths of link and wire assemblies on both sides of sunroof opening.
2. Connect sunroof connector to sunroof switch and positive (+) power supply.
3. Set lid assembly to fully closed position **A** by operating OPEN switch and TILT switch.
4. Fit outer side of lid assembly to the surface of roof on body outer panel.
5. Remove motor, and keep OPEN switch pressed until motor pinion gear reaches the end of its rotating range
6. Install motor.
7. Check that motor drive gear fits properly in wires.
8. Press TILT-UP switch to check lid assembly for normal tilting.
9. Check sunroof lid assembly for normal operations (tilt-up, tilt-down, open, and close).

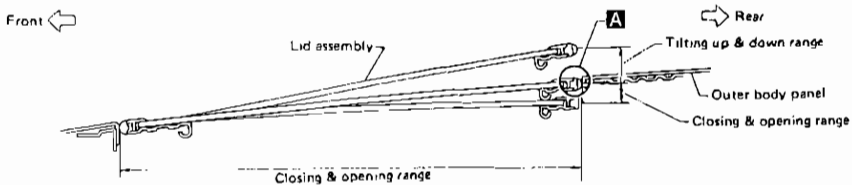

SBF920F


GI
WA
EM
LC
EC
FE
CL
MT
AT
PD
FA
RA
BR
ST
RS
BT
RA
EL
FOX

SUN ROOF

- After any adjustment, check sun roof operation and lid alignment.
- Handle finisher plate and glass lid with care so not to cause damage.
- It is desirable for easy installation to mark each point before removal.


CAUTION:

Always work with a helper.

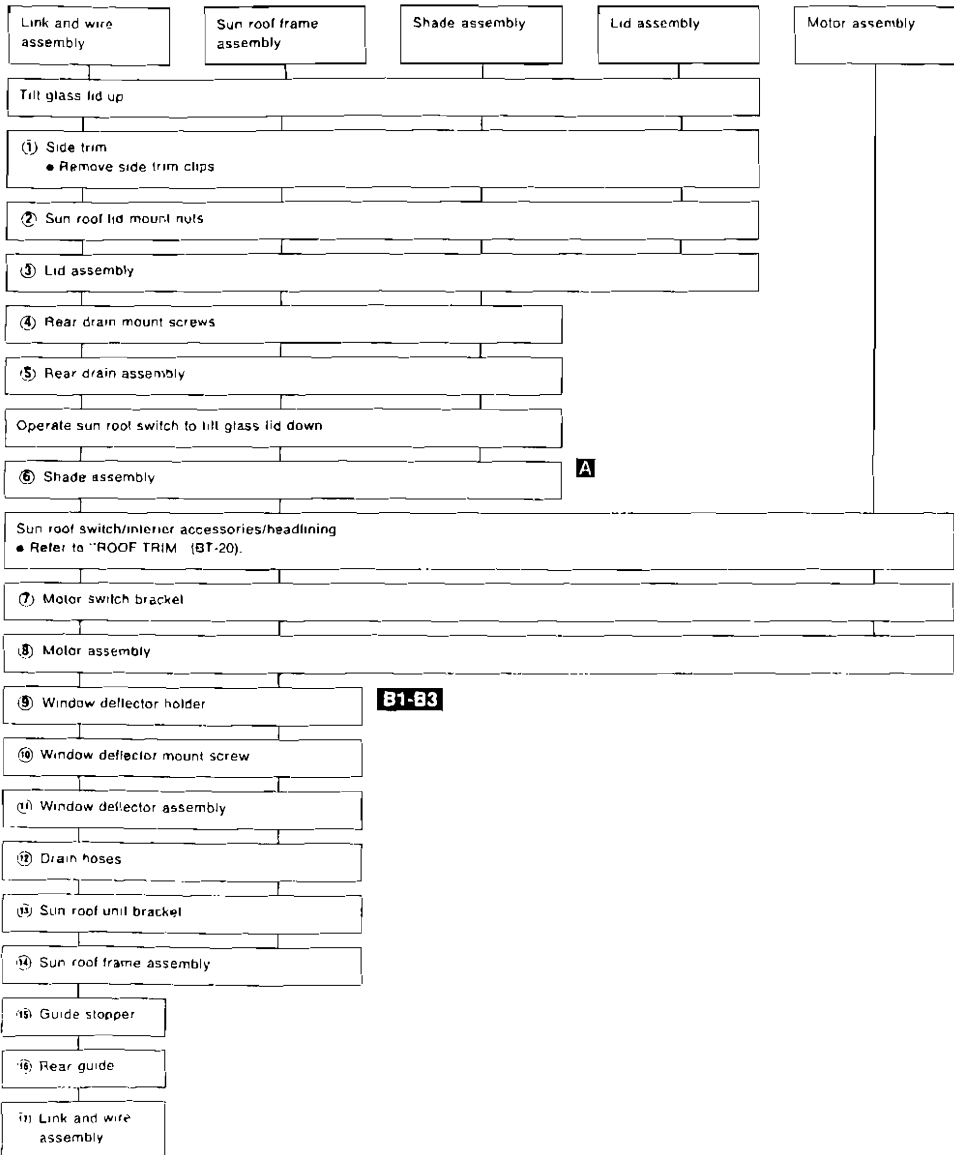


SUN ROOF

SEC. 264-736

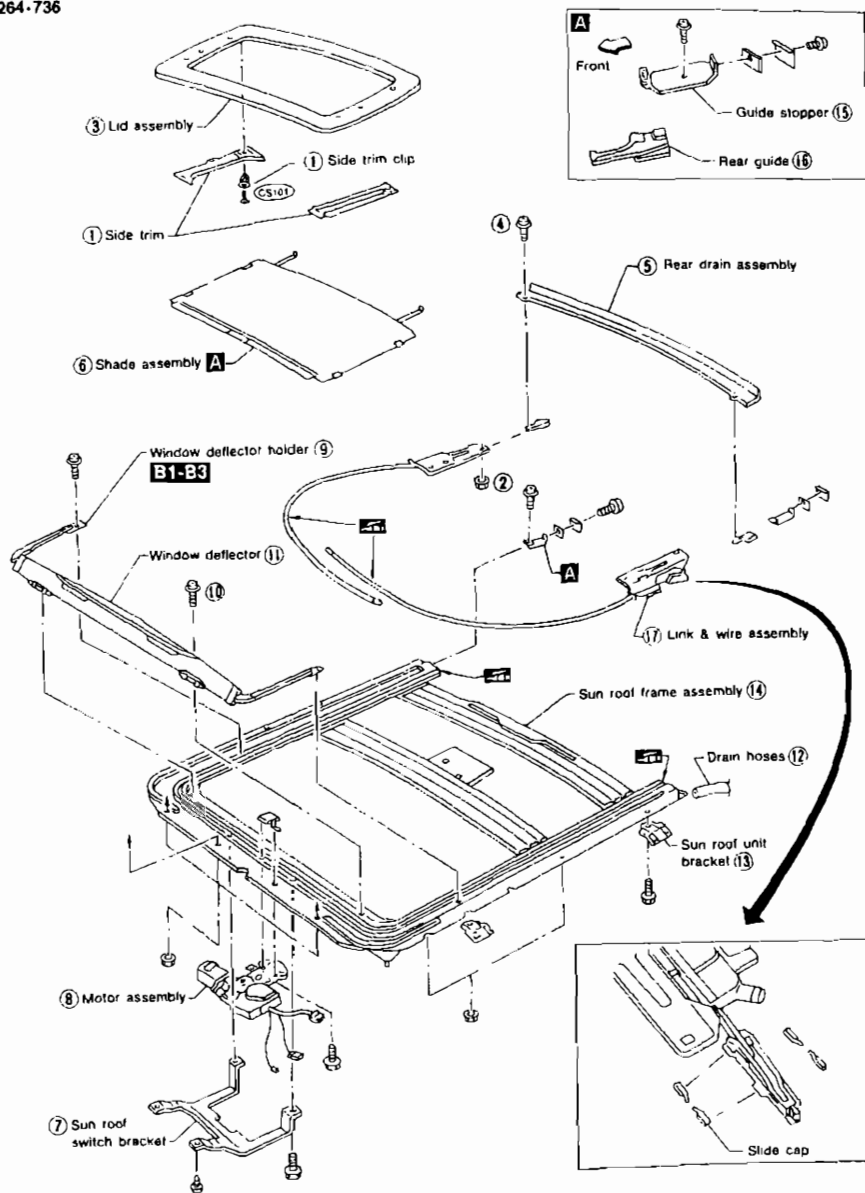


SBT007


SUN ROOF

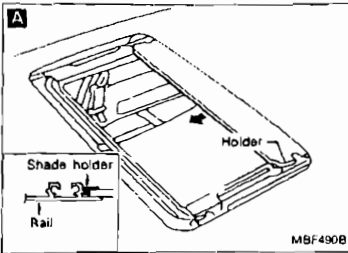


- A** Using flat-bladed screwdriver, pry shade assembly holder off rail. Then pull shade assembly forward to remove it from rail.

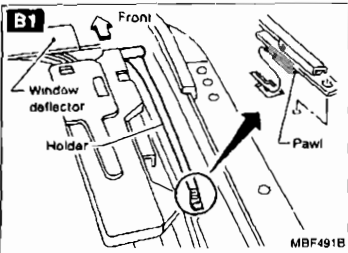

- B1** Disengage pawls from rail, then remove window deflector holder.

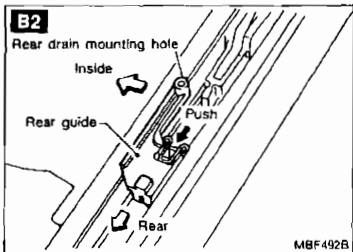


- B2** Using flat-bladed screwdriver, pry stopper spring off rail groove. Then slide rear guide backward to remove it from rail.

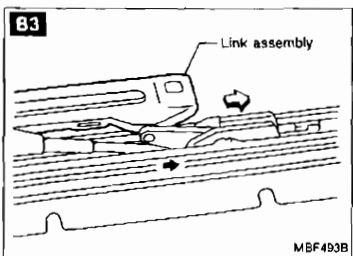

- B3** Remove wire and link assembly from rail while pushing link back with flat-bladed screwdriver.

WINDSHIELD AND WINDOWS

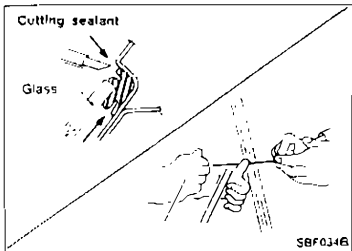

REMOVAL

After removing moldings, remove glass.

CAUTION:

Be careful not to scratch glass when removing.

INSTALLATION

- Use genuine Nissan Sealant kit or equivalent. Follow instructions furnished with it.
- After installation, the vehicle should remain stationary until the sealant hardens.

WARNING:





Keep heat and open flames away as primers are flammable.

CAUTION:

Advise users not to drive the vehicle on rough roads until sealant has properly vulcanized.

- Do not use sealant which is past its usable term.
- Do not leave cartridge unattended with its cap open.
- Keep primers and sealant in a cool, dry place. Ideally, they should be stored in a refrigerator.
- Molding must be installed securely so that it is in position and leaves no gap.

Windshield and Rear Window

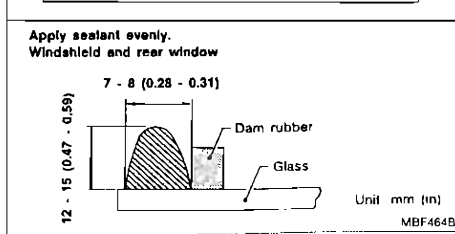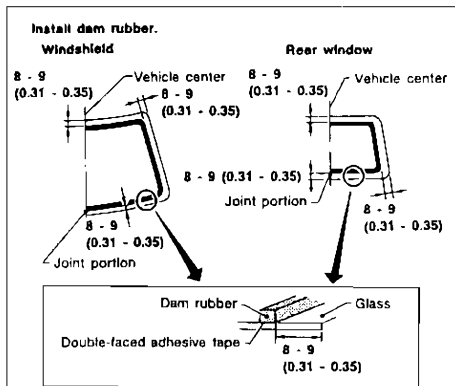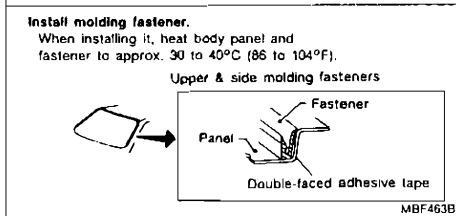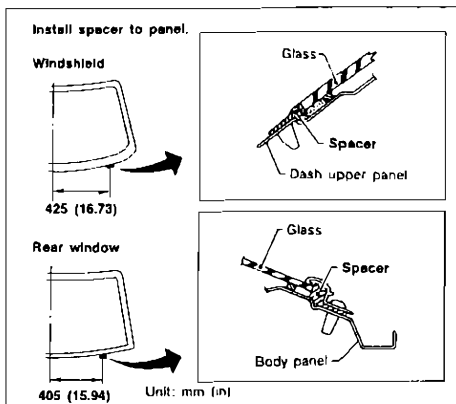

REPAIRING WATER LEAKS FOR WINDSHIELD AND WINDOWS







Leaks can be repaired without removing and reinstalling glass.

If water is leaking between caulking material and body or glass, determine the extent of leaking. This can be determined by applying water while pushing glass outward.


To stop the leak, apply primer and then sealant to the leak point.

Side Window

SEC. 830

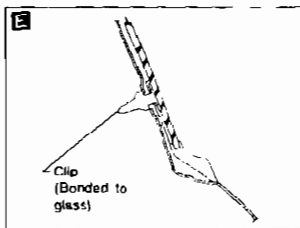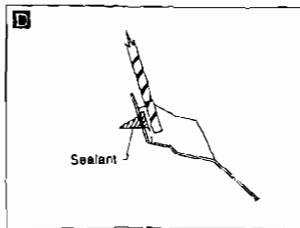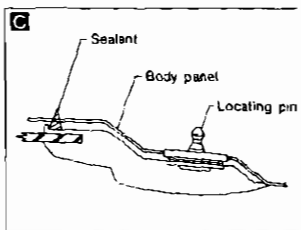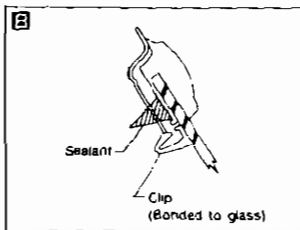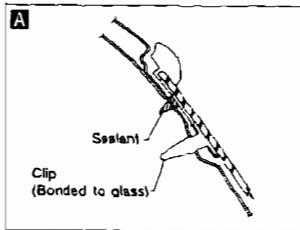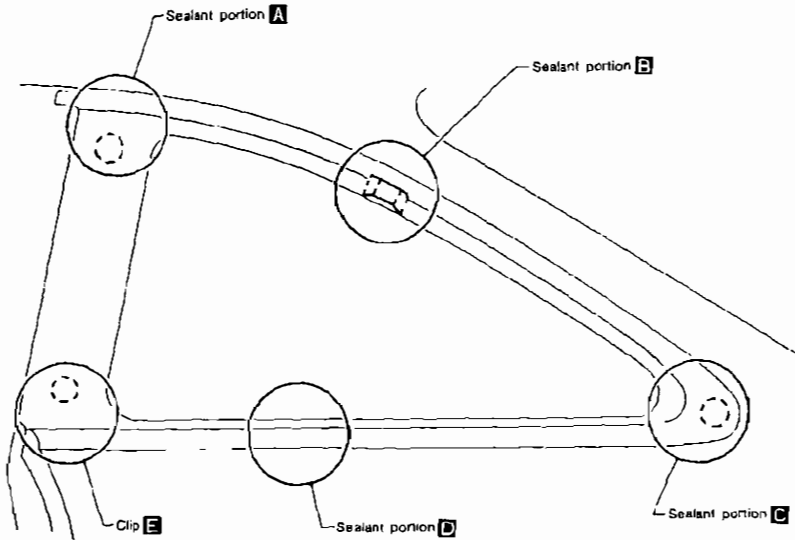

Sealant quantity

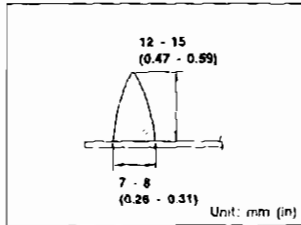

MBF4658A

DOOR MIRROR

★For Wiring Diagram, refer to "POWER DOOR MIRROR" in EL section.


CAUTION:

Be careful not to scratch door rearview mirror body.

REMOVAL — Door mirror



- ① Remove door trim. Refer to "DOOR TRIM" in "INTERIOR TRIM" for details (BT-19)
- ② Remove inner cover front corner of door **A**.
- ③ Disconnect door mirror harness connector.
- ④ Remove harness clips
- ⑤ Remove three bolts securing door mirror, then remove door mirror.

SEC. 963

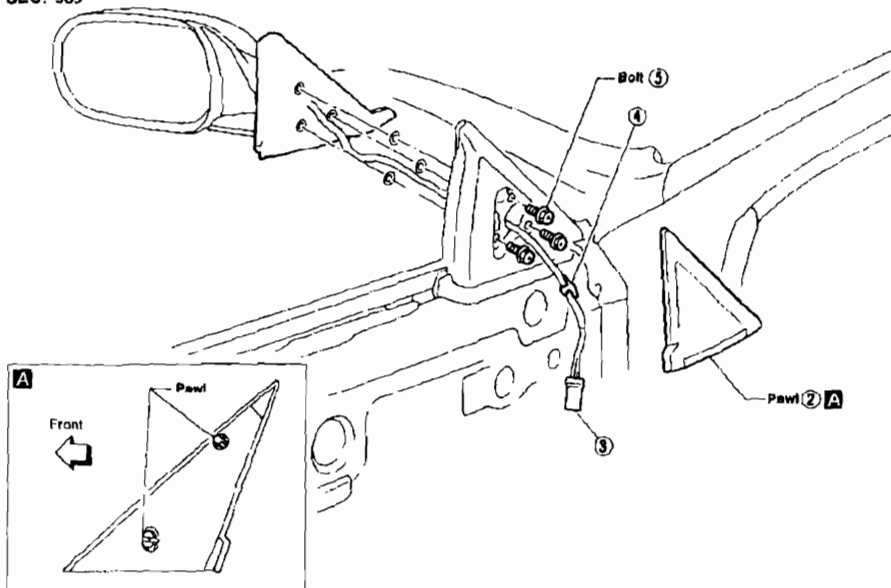

Removal

- Wrap flat-bladed screwdriver with a cloth to prevent scratching rear of door mirror. Do not insert screwdriver too far.

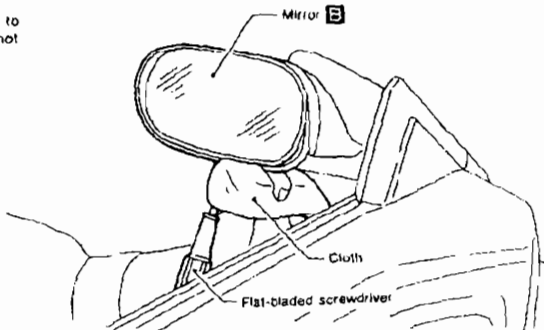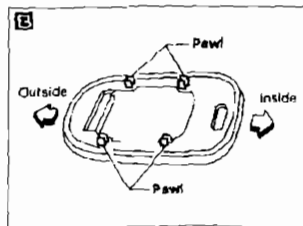


MBF463BA


FRONT AND REAR AIR SPOILER

- When installing, make sure that there are not gaps or waves at ends of air spoiler.
- Before installing spoiler, clean and remove oil from surface where spoiler will be mounted.

Front Air Spoiler

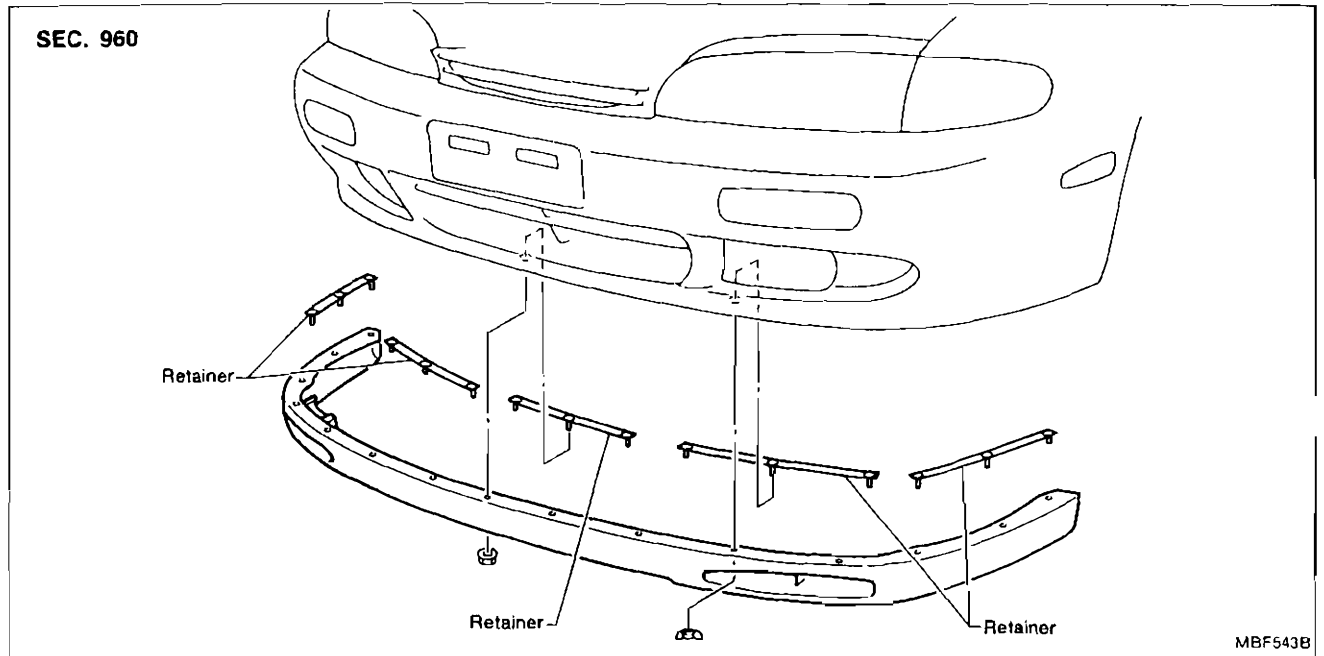


Rear Air Spoiler

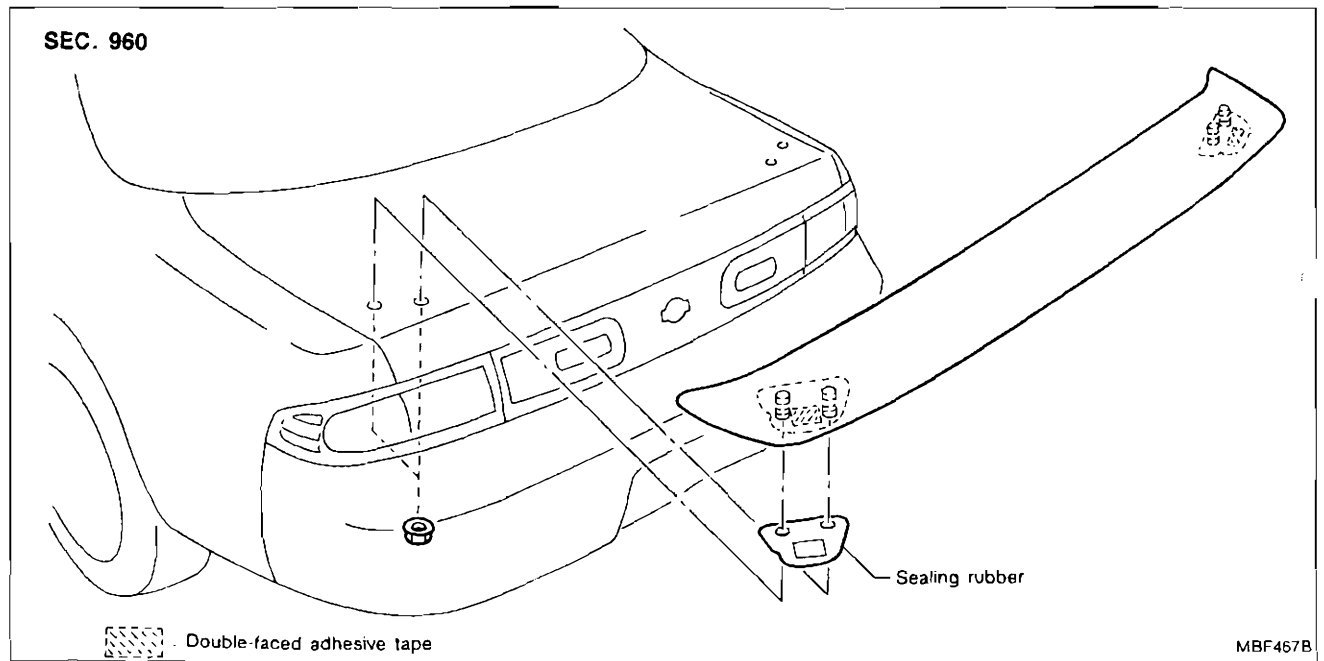

BODY ALIGNMENT


- All dimensions indicated in figures are actual ones.
- When using a tracking gauge, adjust both pointers to equal length. Check the pointers and gauge itself to make sure there is no free play.
- When a measuring tape is used, check to be sure there is no elongation, twisting or bending.
- Measurements should be taken at the center of the mounting holes.
- An asterisk (*) following the value at the measuring point indicates that the measuring point on the other side is symmetrically the same value.
- The coordinates of the measurement points are the distances measured from the standard line of "X", "Y" and "Z".

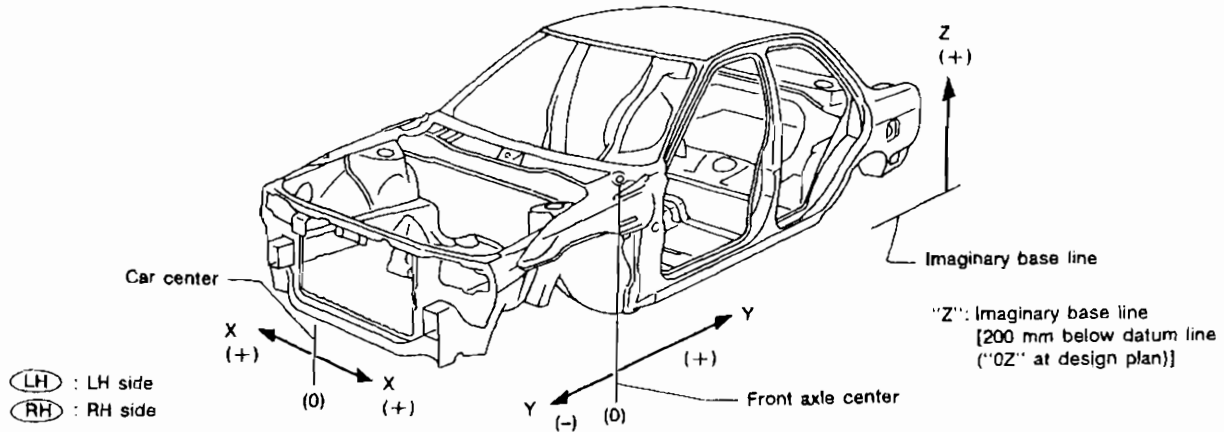

Engine Compartment

SBF874G

MEASUREMENT






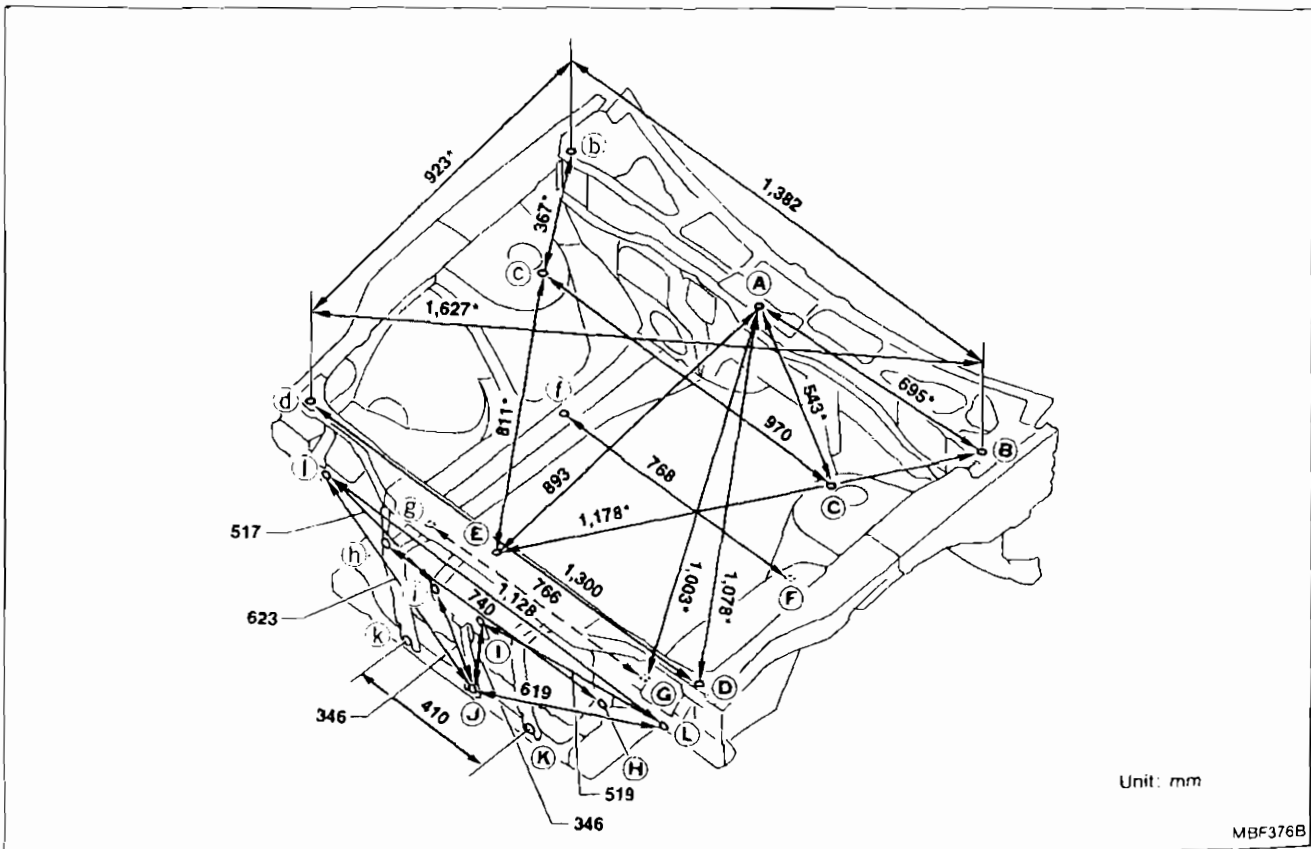


BODY ALIGNMENT

Engine Compartment (Cont'd)

Unit: mm


MEASUREMENT POINTS

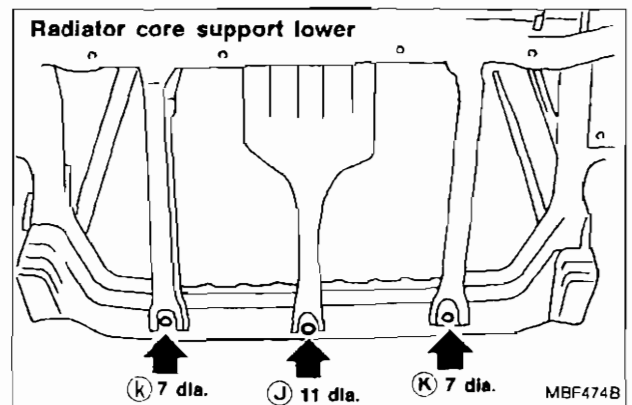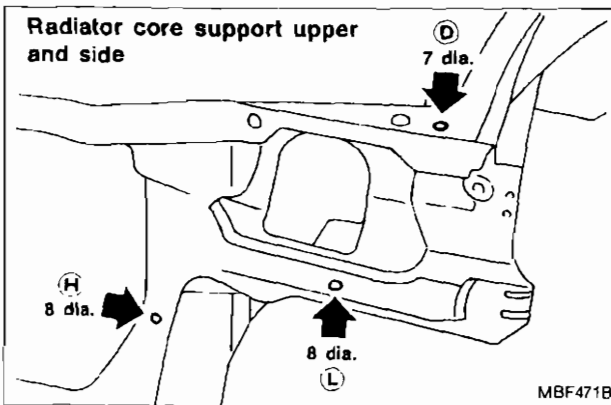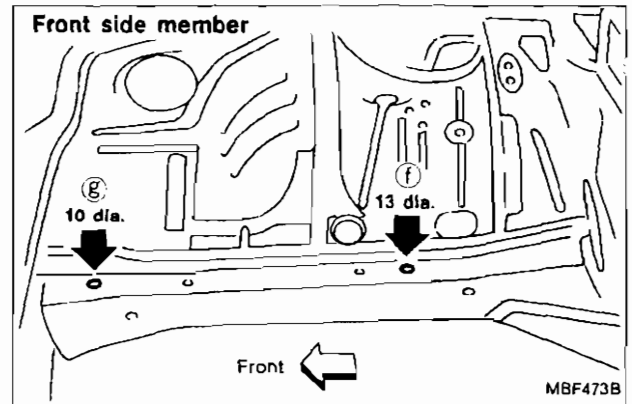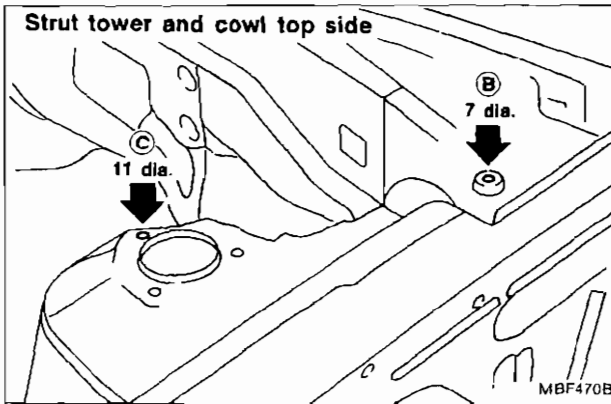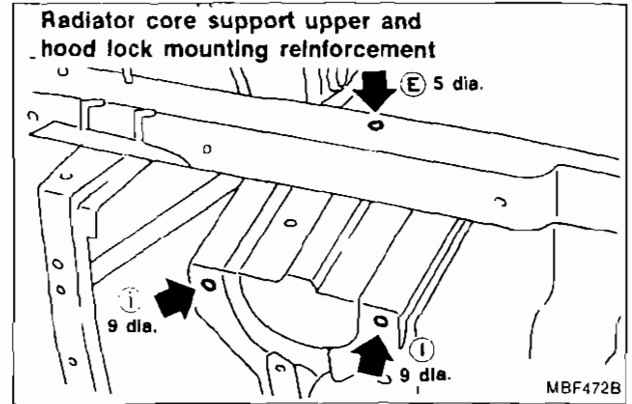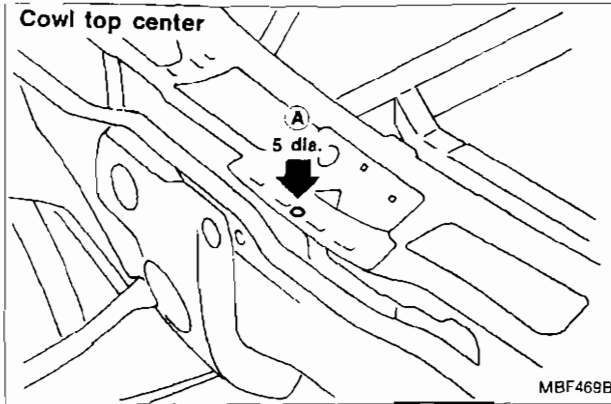

BODY ALIGNMENT

Underbody


MEASUREMENT

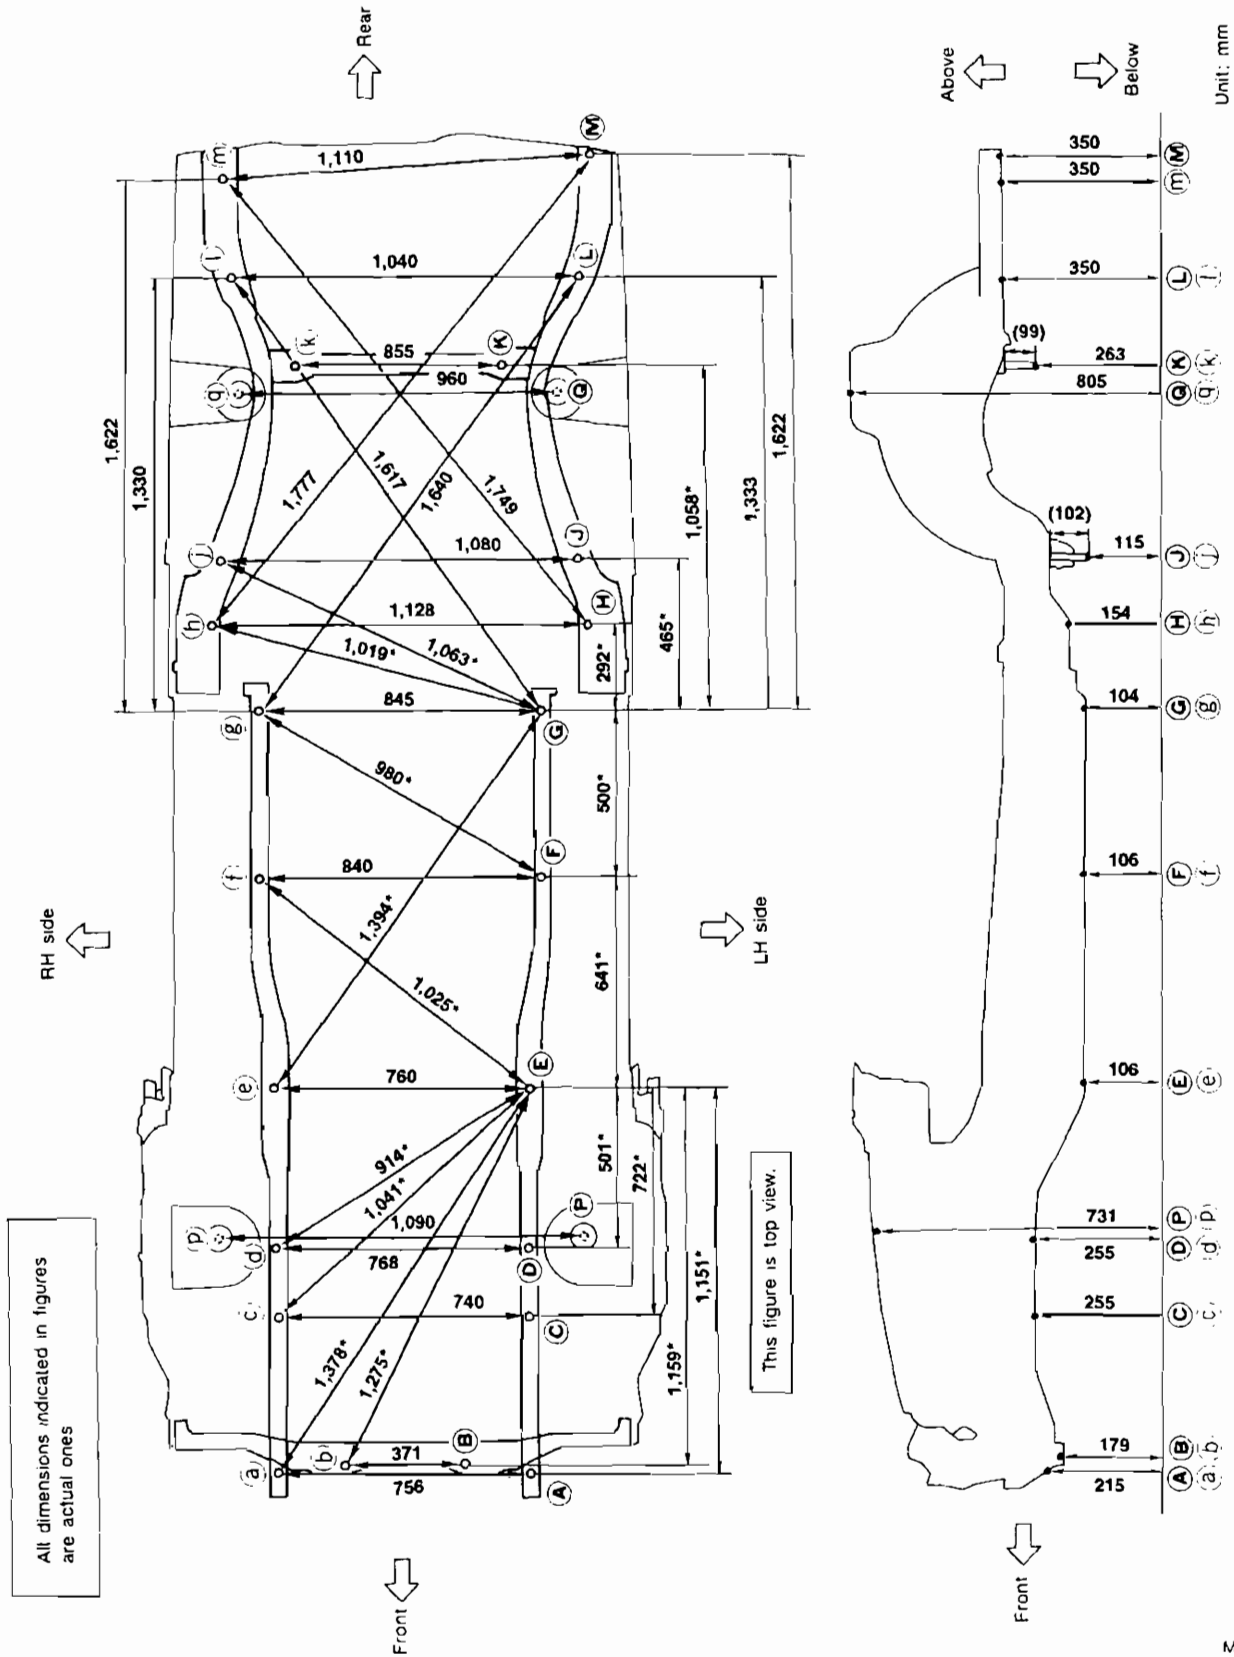

BODY ALIGNMENT

Underbody (Cont'd)

MEASUREMENT POINTS

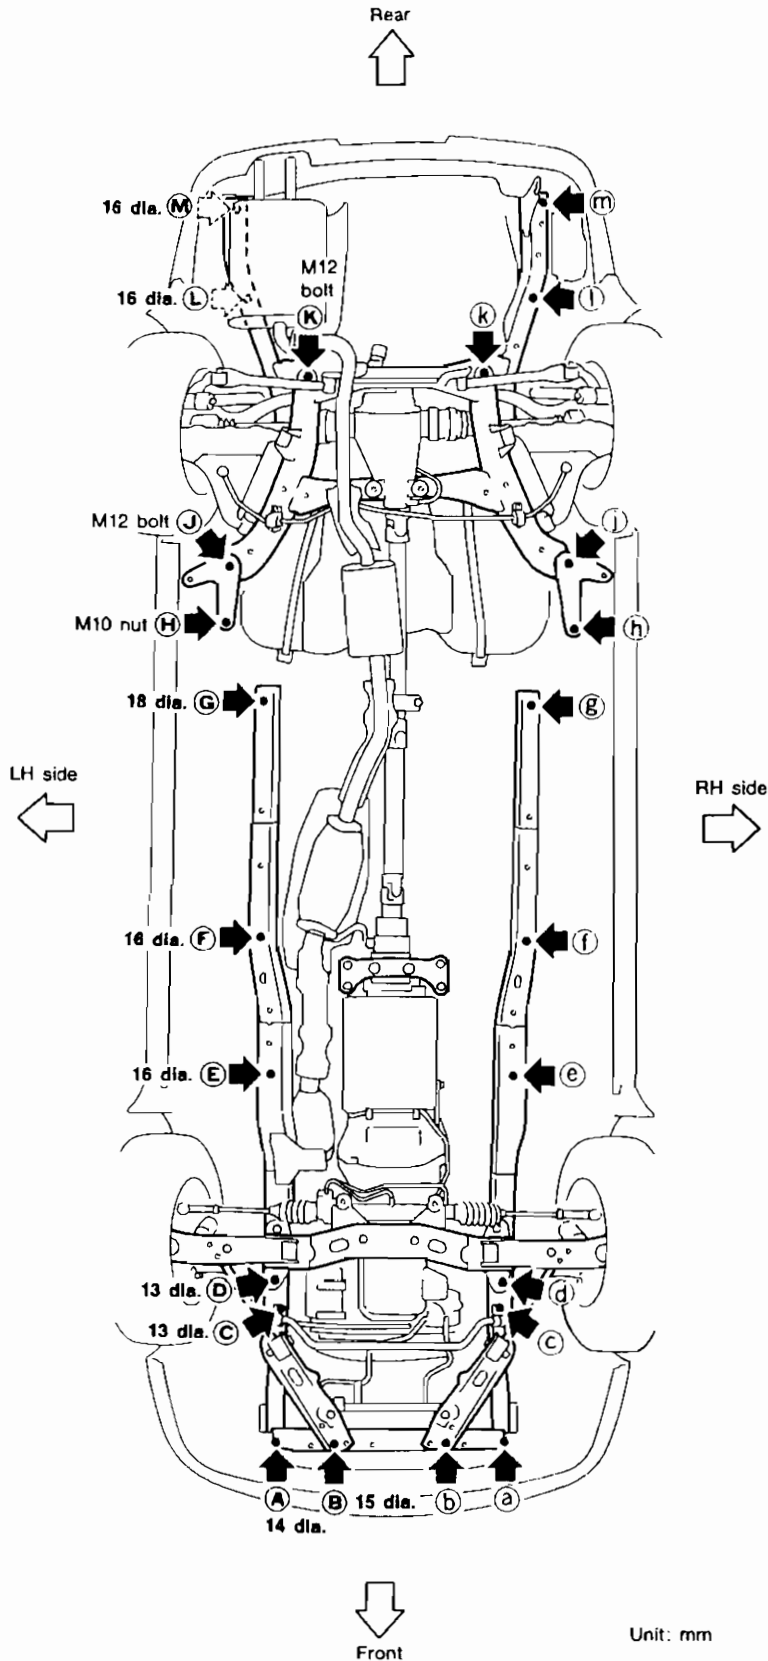

Front coordinates: Rear coordinates:

Ⓐ, ⓐ Ⓖ, ⓑ
 X : 378 X : 422.5
 Y : -635.5 Y : 1,650
 Z : 214.5 Z : 103.9

Ⓑ, ⓑ Ⓗ, ⓓ
 X : 185.3 X : 564
 Y : -630 Y : 1,900
 Z : 179 Z : 154

Ⓒ, Ⓒ Ⓙ, ⓓ
 X : 370 X : 540
 Y : -196.5 Y : 2,100
 Z : 254.9 Z : 115.2


Ⓓ, ⓓ Ⓚ, ⓓ
 X : 384.2 X : 308
 Y : 32 Y : 2,690
 Z : 254.9 Z : 262.8

Ⓔ, ⓔ Ⓛ
 X : 380 X : 540
 Y : 510 Y : 2,955
 Z : 106.2 Z : 350

Ⓕ, ⓔ ⓓ
 X : 420 X : 500
 Y : 1,150 Y : 2,955
 Z : 106.2 Z : 350

Ⓜ
 X : 580
 Y : 3,245
 Z : 350

Ⓝ
 X : 530
 Y : 3,250
 Z : 350

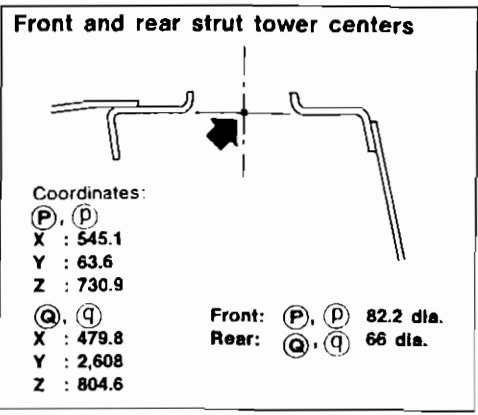

Unit: mm

MBF477BA

HEATER & AIR CONDITIONER

SECTION HA

CONTENTS

MANUAL AND AUTO

PRECAUTIONS AND PREPARATION	3
Supplemental Restraint System (SRS) "AIR BAG" and "SEAT BELT PRE-TENSIONER".....	3
Precautions for Working with HFC-134a (R-134a)	3
General Refrigerant Precautions	3
Precautions for Refrigerant Connection	4
Precautions for Servicing Compressor.....	5
Special Service Tools	5
HFC-134a (R-134a) Service Tools and Equipment.....	6
Precautions for Service Equipment	8
DESCRIPTION	10
Refrigeration Cycle	10
Component Layout	11
Discharge Air Flow	12

MANUAL

DESCRIPTION	13
Control Operation	13
TROUBLE DIAGNOSES	14
Contents.....	14
Wiring Diagram — HEAT —	37
Wiring Diagram — A/C, M —.....	45

AUTO

DESCRIPTION	72
Introduction	72
Features.....	72
Control Operation	73

TROUBLE DIAGNOSES

Contents.....	76
Wiring Diagram — A/C, A —	104
SYSTEM DESCRIPTION	127
Overview of Control System.....	127
Control System Input Components	128
Control System Automatic Amplifier (Auto amp.).....	130
Control System Output Components.....	130

MANUAL AND AUTO

SERVICE PROCEDURES	138
HFC-134a (R-134a) Service Procedure.....	138
Maintenance of Lubricant Quantity in Compressor	140
Refrigerant Lines	142
Compressor Mounting	144
Belt Tension	144
Fast Idle Control Device (FICD)	144
Compressor — Model DKV-14C (ZEXEL make) ..	145

MANUAL

SERVICE PROCEDURES	148
Overhaul — Push Control Unit Assembly ..	148
Disassembly	148

MANUAL AND AUTO

SERVICE DATA AND SPECIFICATIONS (SDS) ..	149
General Specifications.....	149
Inspection and Adjustment.....	149

GI
M2
EM
LC
EC
EE
GL
MT
AT
PD
FA
RA
RB
RT
RE
HA
FI
DX