

SECTION **IDX**

# ALPHABETICAL INDEX

## A

ABS (anti-lock brake system).....	BR-24
ABS actuator.....	BR-28
ABS circuit diagram.....	BR-46
ABS component parts and connector locations.....	BR-43
ABS control unit.....	BR-28
ABS hydraulic circuit.....	BR-24
ABS self-diagnosis.....	BR-40
ABS symptom chart.....	BR-42
ABS system components.....	BR-25
ABS trouble diagnoses.....	BR-39
ABS wheel sensors.....	BR-27
ABS wiring diagram.....	BR-29
A/C HFC134a (R134a) system precaution.....	HA-3
A/C HFC134a (R134a) system service procedure.....	HA-138
A/C HFC134a (R134a) system service tools.....	HA-6
A/C HFC134a system service equipment precaution.....	HA-8
A/C air flow.....	HA-12
A/C circuit diagram (auto A/C).....	HA-103
A/C circuit diagram (manual A/C).....	HA-43
A/C component layout.....	HA-11
A/C compressor clutch removal and installation.....	HA-146
A/C compressor mounting.....	HA-144
A/C compressor precaution.....	HA-5
A/C compressor special service tool.....	HA-5
A/C control linkage adjustment (auto A/C).....	HA-125
A/C control linkage adjustment (manual A/C).....	HA-70
A/C control operation (auto A/C).....	HA-73
A/C control operation (manual A/C).....	HA-13
A/C diagnostic work flow (auto A/C).....	HA-78
A/C diagnostic work flow (manual A/C).....	HA-15
A/C harness layout (auto A/C).....	HA-101
A/C harness layout (manual A/C).....	HA-33
A/C lubricant (R134a).....	HA-140
A/C operational check (auto A/C).....	HA-79
A/C operational check (manual A/C).....	HA-16
A/C performance chart.....	HA-28
A/C performance test diagnoses.....	HA-26
A/C push control.....	HA-148
A/C relay.....	HA-70
A/C self-diagnoses (auto A/C).....	HA-84
A/C symptom chart (auto A/C).....	HA-82
A/C symptom chart (manual A/C).....	HA-18
A/C system description (auto A/C).....	HA-127
A/C trouble diagnoses (auto A/C).....	HA-76
A/C trouble diagnoses (manual A/C).....	HA-14
A/C wiring diagram (auto A/C).....	HA-104

A/C wiring diagram (manual A/C).....	HA-45
Accelerator control system.....	FE-2
Accelerator wire adjustment.....	FE-2
Activated carbon canister.....	EC-17
Air bag.....	RS-5
Air bag disposal.....	RS-12
Air bag precautions.....	GI-2
Air bag removal and installation.....	RS-9
Air bleeding for brake system.....	BR-5
Air cleaner filter replacement.....	MA-15
Air conditioner cut control.....	EC-26
Air mix door control linkage adjustment (auto A/C).....	HA-125
Air mix door control linkage adjustment (manual A/C).....	HA-71
Air mix. door motor.....	HA-131
Air spoiler, front - See Front air spoiler.....	BT-38
Air spoiler, rear - See Rear air spoiler.....	BT-38
Alternator.....	EL-41
Ambient sensor.....	HA-129
Angular tightening application.....	EM-2
Antenna - See Power antenna.....	EL-196
Anti-freeze coolant.....	MA-10
AT diagnosis communication line.....	EC-139
AT control unit.....	AT-77
AT fluid temperature sensor.....	AT-81
AT removal and installation.....	AT-95
AT self-diagnoses.....	AT-41
AT trouble diagnoses.....	AT-10
Audio.....	EL-190
Audio and A/C control removal and installation - See Instrument panel.....	BT-14
Automatic amplifier.....	HA-130
Automatic transmission fluid.....	MA-10
Automatic transmission fluid replacement.....	MA-20
Automatic transmission number.....	GI-37
Auxiliary air control (AAC).....	EC-15
Axle housing (rear).....	RA-7

## B

Back-up lamp.....	EL-18
Back-up lamp switch (MT).....	MT-5
Ball joint front axle.....	FA-14
Battery.....	EL-20
Baulk ring (MT).....	MT-9
Belt inspection (drive belt).....	MA-12
Bi-level door control linkage adjustment (auto A/C).....	HA-126
Bi-level door control linkage adjustment (manual A/C).....	HA-71
Blower motor.....	HA-68
Blower resistor.....	HA-68
Board-on Lift.....	GI-40

# ALPHABETICAL INDEX

Body alignment .....	BT-39
Boost pressure control .....	EC-30
Boost pressure sensor .....	EC-18, 128, 206
Boring/horning cylinder block .....	EM-62
Brake booster .....	BR-10
Brake control valve (Proportioning Valve) .....	BR-4
Brake fluid .....	MA-10
Brake fluid change .....	BR-5
Brake fluid level .....	MA-21
Brake fluid level and line check .....	BR-5
Brake hydraulic line .....	BR-3
Brake inspection .....	MA-22
Brake lines and cables inspection .....	MA-21
Brake master cylinder .....	BR-8
Brake pedal .....	BR-7
Bumper, front - See Front bumper .....	BT-6
Bumper, rear - See Rear bumper .....	BT-8

## C

Camshaft inspection .....	EM-40
Camshaft position sensor (CMPS) .....	EC-12
Camshaft position sensor inspection .....	EC-109, 201
Canister control .....	EC-26
Canister control solenoid valve .....	EC-16
Center bearing assembly (propeller shaft) .....	PD-8
Center bearing disassembly (propeller shaft) .....	PD-8
Charging system .....	EL-38
Cigarette lighter .....	EL-181
Circuit breaker .....	EL-19
Clearance lamp .....	EL-72
Clock .....	EL-181
Clutch cover .....	CL-10
Clutch disc .....	CL-10
Clutch fluid .....	MA-10
Clutch fluid level .....	MA-19
Clutch master cylinder .....	CL-6
Clutch operating cylinder .....	CL-7
Clutch pedal .....	CL-4
Clutch pedal free play .....	CL-4
Clutch pedal height .....	CL-4
Clutch release bearing .....	CL-8
Clutch withdrawal lever .....	CL-8
Coil spring (front) .....	FA-12
Coil spring (rear) .....	RA-19
Combination lamp, rear, removal and installation .....	BT-26
Combination meter .....	EL-114
Combination meter removal and installation - See Instrument panel .....	BT-14
Combination switch .....	EL-46
Compression pressure .....	EM-12

Compressor clutch removal and installation .....	HA-146
Compressor mounting .....	HA-144
Compressor precaution .....	HA-5
Compressor special service tool .....	HA-5
Connecting rod .....	EM-60
Connecting rod bearing clearance .....	EM-65
Connecting rod bushing clearance .....	EM-66
Console box - See Instrument panel .....	BT-14
Consult for ECCS .....	EC-53
Consult general information .....	GI-33
Control lever (MT) .....	MT-10
Control valve (AT) .....	AT-117
Converter housing installation .....	AT-96
Coolant replacement .....	MA-12
Cooling circuit (engine) .....	LC-10
Cooling fan .....	LC-14
Cooling fan control .....	EC-29
Cooling fan control system .....	LC-14
Cooling fan motor inspection .....	EC-176, 206
Cooling fan relay inspection .....	EC-176, 206
Counter gear (MT) .....	MT-9
Coupling sleeve (MT) .....	MT-9
Crankcase emission control system .....	EC-212
Crankshaft assembly .....	EM-68
Crankshaft bearing clearance .....	EM-63
Crankshaft inspection .....	EM-62
Cylinder block .....	EM-57
Cylinder block boring .....	EM-62
Cylinder head .....	EM-38
Cylinder head bolt tightening .....	EM-26

## D

Data link connector for Consult .....	EC-53, 195
Daytime light system .....	EL-56
Differential carrier assembly .....	PD-24
Differential carrier disassembly .....	PD-13
Differential gear oil .....	MA-10
Differential gear oil replacement .....	MA-21
Differential oil cooler system .....	PD-29
Dimensions .....	GI-38
Direct ignition system .....	EC-33
Door glass .....	BT-11
Door mirror .....	BT-37
Door trim .....	BT-19
Door, front - See Front door .....	BT-10
Drive pinion diff. inspection .....	PD-16
Drive pinion height .....	PD-17
Drive plate runout .....	EM-67
Drive shaft (rear) .....	RA-11
Dropping resistor (AT) .....	AT-83

## E

ECCS basic inspection .....	EC-63
-----------------------------	-------

## ALPHABETICAL INDEX

ECCS circuit diagram.....	EC-11
ECCS component parts location.....	EC-5
ECCS fail-safe system.....	EC-31
ECCS on-board diagnostic system.....	EC-48
ECCS relay inspection.....	EC-206
ECCS system diagram and chart.....	EC-8
ECCS trouble diagnoses.....	EC-41
ECM input/output signal inspection.....	EC-196
EGR canister control solenoid valve inspection.....	EC-148, 203
EGR control (EGRC) - BPT valve.....	EC-16
EGR control (EGRC) - solenoid valve.....	EC-16
EGR valve inspection.....	EC-203
EGRC - BPT valve inspection.....	EC-203
Electric sun roof.....	EL-179
Electrical load signal circuit.....	EC-192
Electrical units location.....	EL-249
Electronic ignition (EI) system.....	EC-22
Engine control module (ECM).....	EC-12
Engine coolant temperature sensor (ECTS).....	EC-13
Engine coolant temperature sensor inspection.....	EC-116, 201
Engine oil.....	MA-10
Engine oil filter replacement.....	MA-16
Engine oil precautions.....	GI-5
Engine oil replacement.....	MA-15
Engine outer component parts.....	EM-9
Engine removal.....	EM-55
Engine serial number.....	GI-37
Evaporative emission system.....	EC-210
Exhaust gas recirculation (EGR) system.....	EC-26
Exhaust gas recirculation (EGR) valve.....	EC-16
Exhaust system.....	FE-7
Exhaust system inspection.....	MA-19
Exterior.....	BT-22
Exterior lamp.....	EL-72

### F

Fan control amp.....	HA-137
Fan switch.....	HA-68
Fast idle cam (FIC).....	EC-15
Fast idle cam (FIC) inspection and adjustment.....	EC-207
Final drive disassembly.....	PD-12
Final drive pre-inspection.....	PD-13
Final drive removal and installation.....	PD-10
Finisher, rear panel - See Rear panel finisher.....	BT-25
Floor trim.....	BT-17
Fluid temperature sensor (AT).....	AT-81
Fluids.....	MA-10
Flywheel runout.....	EM-67
Fog lamp, front.....	EL-82

Fog lamp, rear - See Rear fog lamp.....	EL-90
Fork rod (MT).....	MT-10
Forward clutch.....	AT-136
Front air spoiler.....	BT-38
Front axle.....	FA-8
Front bumper.....	BT-6
Front disc brake.....	BR-12
Front door.....	BT-10
Front fog lamp.....	EL-82
Front seat.....	BT-27
Front seat belt.....	RS-3
Front suspension.....	FA-11
Front washer.....	EL-138
Front wiper.....	EL-138
Fuel check valve inspection.....	EC-211
Fuel filler lid.....	BT-8
Fuel filter.....	EC-17
Fuel filter replacement.....	MA-14
Fuel gauge.....	EL-115
Fuel injector.....	EC-14
Fuel line inspection.....	MA-14
Fuel precautions.....	GI-5
Fuel pressure check.....	EC-208
Fuel pressure regulator.....	EC-14
Fuel pressure release.....	EC-208
Fuel pump.....	EC-14
Fuel pump control.....	EC-25
Fuel pump inspection.....	EC-159, 202
Fuel pump relay inspection.....	EC-206
Fuel system.....	FE-3
Fuel tank vacuum relief valve inspection.....	EC-211
Fuse.....	EL-19
Fusible link.....	EL-19

### G

Garage jack and safety stand.....	GI-39
Gauges.....	EL-113
Gears (MT).....	MT-9
Generator - See Alternator.....	EL-41

### H

Harness connector.....	EL-5
Harness layout.....	EL-253
Hazard warning lamp.....	EL-93
Headlamp.....	EL-49
Headlamp aiming control.....	EL-64
Headlamp levelizer - See Headlamp aiming control.....	EL-64
Headlamp washer.....	EL-153
Headlamp wiper.....	EL-153
Heated oxygen (HO2S) heater control.....	EC-29
Heated oxygen sensor (HO2S).....	EC-14

# ALPHABETICAL INDEX

Heated oxygen sensor heater inspection .....	EC-152, 203
Heated oxygen sensor monitor .....	EC-52
Heated seat .....	BT-29, EL-200
Heater mirror .....	EL-185
Heater wiring diagram .....	HA-37
Height (Dimensions).....	GI-38
HFC134a (R134a) system precaution .....	HA-3
HFC134a (R134a) system service procedure.....	HA-138
HFC134a (R134a) system service tools .....	HA-6
HFC134a system service equipment precaution.....	HA-8
High clutch .....	AT-134
Hood.....	BT-6
Horn .....	EL-181
How to follow flow chart in trouble diagnoses.....	GI-30, 37
How to perform efficient diagnosis for an electrical incident .....	GI-19
How to read wiring diagrams .....	GI-9
How to use this manual .....	GI-7
Hydraulic lash adjuster inspection .....	EM-45

## I

IACV - FICD solenoid valve inspection .....	EC-172, 205
IACV-AAC valve inspection.....	EC-169, 204
Identification plate .....	GI-37
Idle air control (IAC) system .....	EC-24
Idle air control valve (IACV).....	EC-15
Idle mixture ratio inspection.....	EC-35
Idle speed inspection .....	EC-35
Ignition coil inspection .....	EC-120, 202
Ignition coil relay inspection .....	EC-206
Ignition control system.....	EC-120
Ignition timing inspection .....	EC-35
Illumination.....	EL-103
In-vehicle sensor.....	HA-128
Inhibitor switch .....	AT-82
Injector inspection .....	EC-156, 205
Injector removal and installation .....	EC-209
Instrument panel .....	BT-14
Intake door control linkage adjustment (auto A/C).....	HA-126
Intake door control linkage adjustment (manual A/C).....	HA-71
Intake door motor.....	HA-135
Intake manifold .....	EM-35
Interior .....	BT-17
Interior lamp .....	EL-103, 110

## K

Knock sensor (KS) .....	EC-16	GI
Knock sensor inspection .....	EC-132, 205	
Knuckle spindle.....	FA-8	MA

## L

Length (Dimensions).....	GI-38	
License lamp.....	EL-72	LC
Line pressure solenoid valve .....	AT-81	
Line pressure test (AT) .....	AT-87	EC
Liquid gasket application .....	EM-2	
Location of electrical units .....	EL-249	
Low and reverse brake .....	AT-140	FE
Lower ball joint (rear susp.).....	RA-20	
Lubricant (R134a) A/C.....	HA-140	
Lubricants .....	MA-10	CL
Lubrication circuit (engine).....	LC-4	
Lubrication-locks, hinges and hood latches .....	MA-24	MT

## M

Magnet clutch .....	HA-146	PD
Main drive gear (MT) .....	MT-9	
Mainshaft (MT).....	MT-9	
Maintenance (engine) .....	MA-12	FA
Maintenance .....	MA-1	
Maintenance general .....	MA-4	
Maintenance periodic .....	MA-5	RA
Malfunction indicator lamp (MIL).....	EC-195	
Manual transmission number.....	GI-37	
Manual transmission oil .....	MA-10	BR
Manual transmission oil replacement.....	MA-19	
Mass air flow sensor (MAFS).....	EC-12	
Mass air flow sensor inspection.....	EC-113, 201	ST
Master cylinder (brake) .....	BR-8	
Master cylinder (clutch).....	CL-6	RS
Meter and gauges.....	EL-113	
MIL & Data link connectors circuit.....	EC-195	
Mirror, door - See Door mirror .....	BT-37	BT
Mode door control linkage adjustment (auto A/C).....	HA-125	
Mode door control linkage adjustment (manual A/C).....	HA-70	HA
Mode door motor .....	HA-133	
Model variation .....	GI-34	EL
Molding - See Exterior .....	BT-22	
MT overhaul .....	MT-8	
MT removal and installation .....	MT-6	
Multi link/lower ball joint (rear) .....	RA-20	
Multi purpose grease.....	MA-10	
Multi-remote control system .....	EL-202	IX

## ALPHABETICAL INDEX

Multipoint fuel injection (MFI) system ..... EC-19  
 Multipoint fuel injection precautions ..... GI-4

### N

Neutral position switch (MT) ..... MT-5  
 Neutral position switch inspection ..... EC-187

### O

Oil cooler (engine) ..... LC-9  
 Oil pan (engine) ..... EM-13  
 Oil pressure (engine) ..... LC-4  
 Oil pump (AT) ..... AT-113  
 Oil pump (engine) ..... LC-5  
 Oil pump regulator valve (engine) ..... LC-7  
 Oil seal replacement (engine) ..... EM-32  
 Oil seal replacement (front of final drive) ..... PD-9  
 Oil seal replacement (side of final drive) ..... PD-9  
 Operating cylinder (clutch) ..... CL-7  
 Overdrive switch ..... AT-82  
 Overrun clutch ..... AT-136  
 Overrun clutch solenoid valve ..... AT-81  
 Oversize piston ..... EM-62

### P

Parking brake control ..... BR-22  
 PCV (positive crankcase ventilation) inspection ..... EC-212  
 PCV filter replacement ..... MA-17  
 Pilot bushing replacement ..... EM-66  
 Pinion gear height diff. .... PD-17  
 Piston assembly ..... EM-67  
 Piston pin inspection ..... EM-59  
 Piston ring inspection ..... EM-59  
 Piston to bore clearance ..... EM-61  
 Power antenna ..... EL-196  
 Power door lock ..... EL-169  
 Power door mirror ..... EL-175  
 Power steering fluid ..... MA-10  
 Power steering fluid level ..... MA-23, ST-6  
 Power steering gear ..... ST-14  
 Power steering hydraulic pressure ..... ST-8  
 Power steering oil pressure switch ..... EC-15  
 Power steering oil pressure switch inspection ..... EC-184, 206  
 Power steering oil pump ..... ST-24  
 Power steering system bleeding ..... ST-7  
 Power supply routing ..... EL-8  
 Power transistor & ignition coil ..... EC-15  
 Power transistor inspection ..... EC-120, 202

Power window ..... EL-157  
 Precautions (General) ..... GI-2  
 Pressure plate - See Clutch cover ..... CL-10  
 Pressure test (AT) ..... AT-87  
 Propeller shaft ..... PD-5  
 Propeller shaft on vehicle service ..... PD-6  
 Propeller shaft vibration ..... PD-6

### R

Rack retainer adjustment ..... ST-6  
 Radiator ..... LC-15  
 Radio - See Audio ..... EL-190  
 Rear air spoiler ..... BT-38  
 Rear axle (disc brake type) ..... RA-7  
 Rear bumper ..... BT-8  
 Rear combination lamp removal and installation ..... BT-26  
 Rear disc brake ..... BR-16  
 Rear fog lamp ..... EL-90  
 Rear panel finisher ..... BT-25  
 Rear seat ..... BT-30  
 Rear seat belt ..... RS-4  
 Rear side window ..... BT-36  
 Rear suspension ..... RA-17  
 Rear washer ..... EL-147  
 Rear window ..... BT-35  
 Rear window defogger ..... EL-185  
 Rear window signal ..... EC-192  
 Rear wiper ..... EL-147  
 Recirculation valve ..... EC-17, 206  
 Refilling engine coolant ..... LC-11  
 Refrigerant connection precaution ..... HA-4  
 Refrigerant general precaution ..... HA-3  
 Refrigerant lines ..... HA-142  
 Refrigeration cycle ..... HA-10  
 Release bearing (clutch) ..... CL-8  
 Reverse clutch ..... AT-130  
 Reverse gear (MT) ..... MT-9  
 Reverse idler shaft (MT) ..... MT-9  
 Revolution sensor (AT) ..... AT-83  
 Ring gear diff. Inspection ..... PD-16  
 Road wheel size ..... GI-38  
 Roof trim ..... BT-20

### S

SAE J1930 terminology list ..... GI-43  
 Seat belt inspection ..... MA-24  
 Seat belt pre-tensioner ..... RS-5  
 Seat belt pre-tensioner disposal ..... RS-12  
 Seat belt pretensioner removal and installation ..... RS-8  
 Seat belt, front - See Front seat belt ..... RS-3  
 Seat belt, rear - See Rear seat belt ..... RS-4  
 Seat, front - See Front seat ..... BT-27

## ALPHABETICAL INDEX

Seat, rear - See Rear seat	BT-30
Self-diagnostic results	EC-50
Shift control (MT)	MT-10
Shift fork (MT)	MT-10
Shift schedule	AT-32
Shift solenoid valve (AT)	AT-81
Shock absorber (rear)	RA-19
Side bearing preload diff.	PD-19
Side trim	BT-17
Side window - See Rear side window	BT-36
SMJ (super multiple junction)	Foldout page
Sodium-filled exhaust valve disposal	EM-3
Spark plug replacement	MA-16
Speedometer	EL-115
Spot lamp	EL-110
SRS Trouble diagnoses	RS-17
Stabilizer bar (front)	FA-13
Stabilizer bar (rear)	RA-21
Stall test (AT)	AT-84
Standardized relay	EL-6
Starter	EL-32
Starting system	EL-28
Steering gear and linkage inspection	MA-23
Steering linkage	ST-14
Steering wheel and column	ST-9
Steering wheel play	ST-5
Steering wheel turning force	ST-7
Stop lamp	EL-80
Striking rod (MT)	MT-10
Strut (front)	FA-12
Sun roof	BT-31
Sun roof, electric - See Electric sun roof	EL-179
Sunload sensor	HA-129
Supplemental Restraint System	RS-5
Synchronizer (MT)	MT-9

### T

Tachometer	EL-115
Tail lamp	EL-72
Tension rod (front)	FA-13
Theft warning system	EL-218
Thermal protector	HA-70
Thermo control amp	HA-68
Thermostat	LC-12
Three way catalyst precautions	GI-4
Throttle position sensor (TPS)	EC-13
Throttle position sensor inspection	EC-135, 204
Throttle position switch inspection	EC-203
Throwout bearing - See Clutch release bearing	CL-8
Thrust washer selection diff.	PD-24
Tie-rod	ST-18
Tie-rod ball joints	ST-18
Tightening torque of standard bolts	GI-42

Timing chain	EM-19
Tire rotation	MA-21
Tire size	GI-38
Tooth contact diff.	PD-23
Torque converter clutch solenoid valve	AT-81
Torque converter installation	AT-96
Towing points	GI-41
Transmission case (MT)	MT-8
Transverse link (front)	FA-14
Tread-FR&RR (Dimensions)	GI-38
Trim	BT-17
Triple pressure switch	HA-69
Trunk lid	BT-8
Trunk room lamp	EL-110
Trunk room trim	BT-21
Turbocharger	EM-49
Turbocharger precautions	GI-4
Turn signal lamp	EL-93
Two-pole lift	GI-40

### V

Vacuum hose (brake system)	BR-11
Vacuum hose drawing (ECCS)	EC-10
Valve guide inspection	EM-42
Valve seat inspection	EM-43
Valve spring inspection	EM-45
Valve timing control (VTC)	EC-27
Valve timing control solenoid valve	EC-17
Vapor lines inspection	MA-17
Vehicle identification number	GI-35
Vehicle speed sensor (VSS)	EC-16
Vehicle speed sensor inspection	EC-145, 202
Viscosity number (SAE)	MA-11
VTC solenoid valve inspection	EC-166, 205

### W

Warning buzzer	EL-130
Warning lamps	EL-122
Washer, front	EL-138
Washer, rear	EL-147
Wastegate valve control solenoid valve	EC-17, 163, 205
Water pump	LC-11
Water temperature gauge	EL-115
Weatherstrip - See Exterior	BT-22
Wheel alignment (front)	FA-5
Wheel alignment (rear)	RA-5
Wheel balance	MA-21
Wheel bearing (front axle)	FA-5
Wheel bearing (rear)	RA-5
Wheel hub (front)	FA-8
Wheel hub (rear)	RA-7
Wheel hub and steering knuckle	FA-8

## ALPHABETICAL INDEX

---

Wheel sensors (ABS).....	BR-27	Windshield .....	BT-35
Wheelbase (Dimensions).....	GI-38	Wiper, front .....	EL-138
Width (Dimensions) .....	GI-38	Wiper, rear .....	EL-147
Window, rear - See Rear window .....	BT-35	Withdrawal lever (clutch).....	CL-8
Window, side - See Rear side			
window .....	BT-36		